TOSHIBA

Color Television

OWNER'S MANUAL

CF32D40

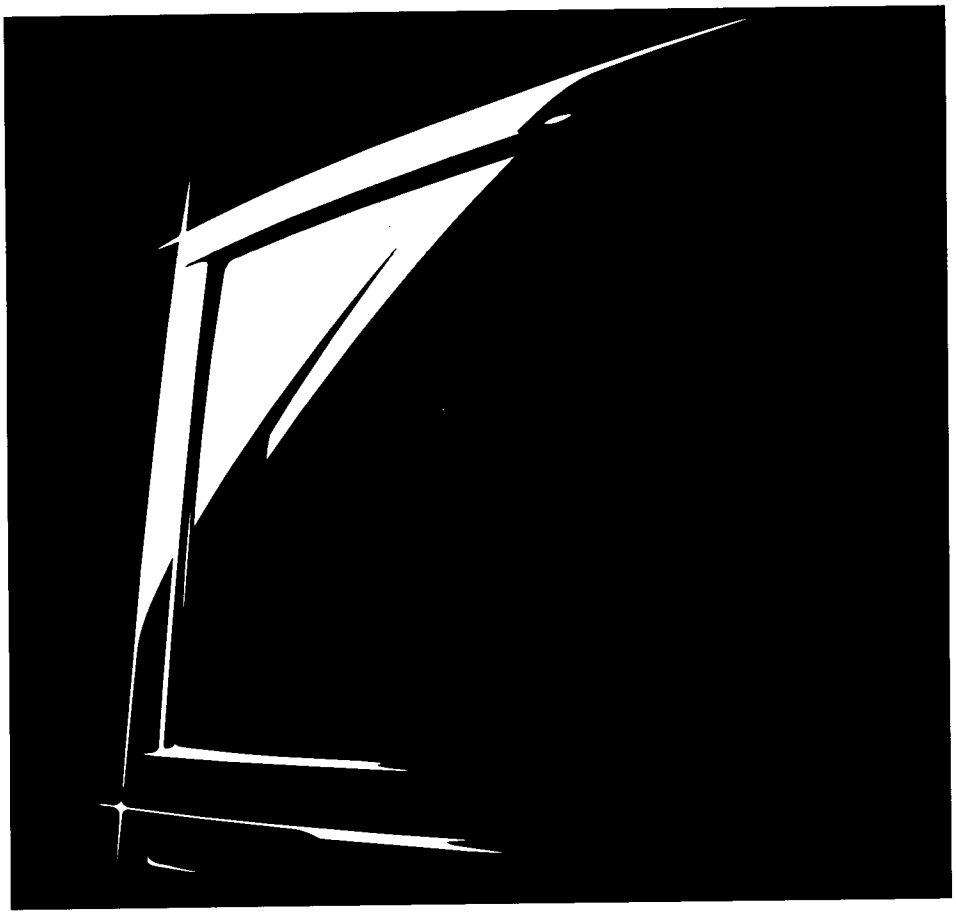

Dear Customer

Congratulations! You have purchased one of the finest Color TV's on the market!
This manual will help you use the many exciting and useful features to make your TV viewing more enjoyable than ever before.
Before operating your TV set, please read all these safety and operating instructions completely and then retain for future reference.

Customer's Record

You will find the model number and serial number on the back of your TV set.
Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model Number _____

Serial Number _____

SAFETY PRECAUTIONS

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

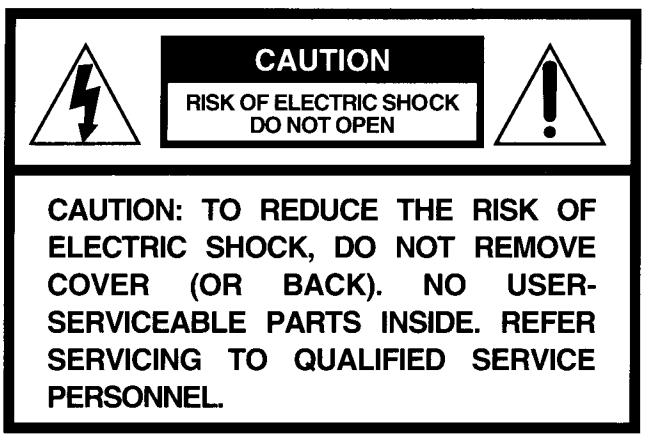
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock.
DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.

The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

CAUTIONS:
TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS ON THE POLARIZED PLUG.

Avoid displaying stationary images on your TV screen for extended periods of time. Stationary patterns generated by computer displays, video games, stock market reports etc. can become permanently engrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. Should you wish to use your TOSHIBA Television to display still images, it is always advisable to reduce brightness and contrast settings. Never leave a video game or computer display unattended.

This TV set may be used only with TOSHIBA stand model ST3202. Use with other stands may result in instability causing possible injury.

NOTE TO CATV SYSTEM INSTALLER:
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

TABLE OF CONTENTS

Set Up

Installing your TV set 4
Antenna/Cable TV general information 4
Home antenna connection 5
Cable TV connection 6
Antenna/Cable TV and VCR connections 7

Preparation

Location of controls (TV set) 9
Location of controls (Remote Control) 10
Before using the Remote Control 11
Using the Remote Control with VCR 12
Using the Remote Control with cable TV converter 13
Programming the Remote Control 14
Menu function (general instructions) 16
TV channels 18
Programming channel memory 19

Basic Operation

Watching TV programs 21
Convenient Remote functions 22
Selecting stereo/SAP broadcasts 23

Advanced Operation

Enhancing the Surround sound effect 24
Locking channels 25
Operating closed captioning feature 26
Adjusting the Picture 28
Adjusting the Sound 29
Changing on-screen display language 30
Activating on-screen demonstration 31

Equipment Connections

Monitor panel 32
Connecting standard VCR 33
Connecting VCR with S-video connector 34
Connecting audio amplifier 35

Reference Section

Cleaning and care 36
Specifications 36
Before calling service personnel 37
Limited warranty 38

INSTALLING YOUR TV SET

WARNING:
TO AVOID INJURY TO A CHILD OR ADULT:
- Do not place the TV on an uneven floor or on unstable stand.
- Do not stand or climb on the TV.
- Do not put a VCR or any heavy object on top of the TV.

DO NOT:
- Place your TV set in a room where direct lighting strikes the screen.
- Place your TV set too close to a wall, in a confined area or in a very warm location.
- Change the plug's safety prong.

DO:
- Use soft and indirect lighting.
- Sit at least 6 feet away from the set.
- Provide normal air circulation for reliable long life.
- Plug into an electrical outlet with standard house power (120 volt AC, 60 Hz).

CAUTION:
As a safety feature, the plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard. You will need to have a new outlet installed by an electrician.
DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.

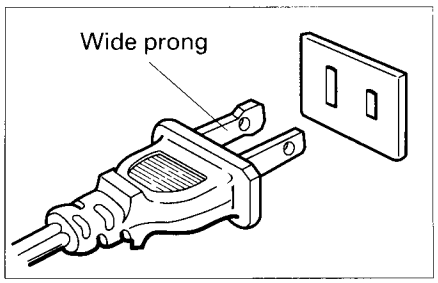

ANTENNA/CABLE TV GENERAL INFORMATION

You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels.
Channels 2-13 are VHF channels, and channels 14-69 are UHF channels.
We recommend using an outdoor antenna for better picture quality.
You can receive Cable TV by connecting a cable supplied by your local cable company.
Cable TV delivers both VHF and UHF channels and other channels not available from your antenna.

TYPES OF ANTENNA CABLES
Shown below are two basic types of antenna cables. Signals from a home antenna may be conducted through either type. Cable TV signals will always be conducted through 75 ohm coaxial cable.

1. A 75 ohm system is generally a round cable with F-type connectors that can easily be attached to a terminal without tools.
2. A 300 ohm system is a flat "twin-lead" cable that can be attached to a terminal through an antenna adapter supplied as an accessory.





HOME ANTENNA CONNECTION

Connecting a single lead-in cable

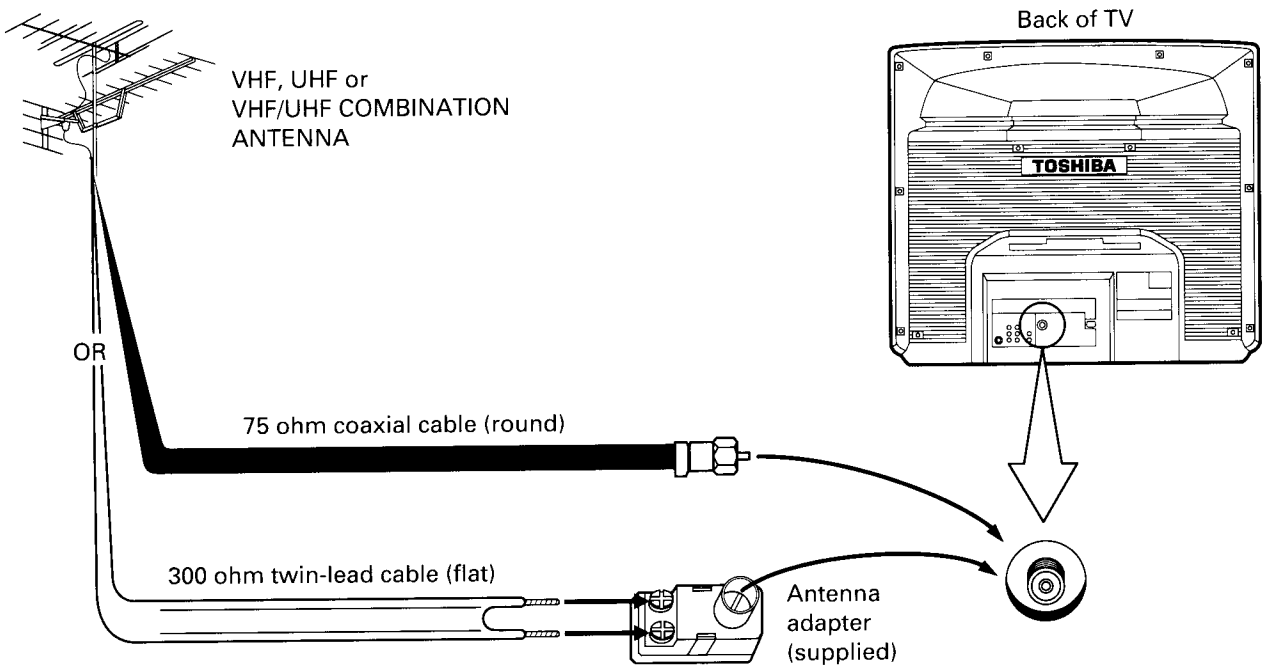

Connecting both VHF and UHF lead-in cables

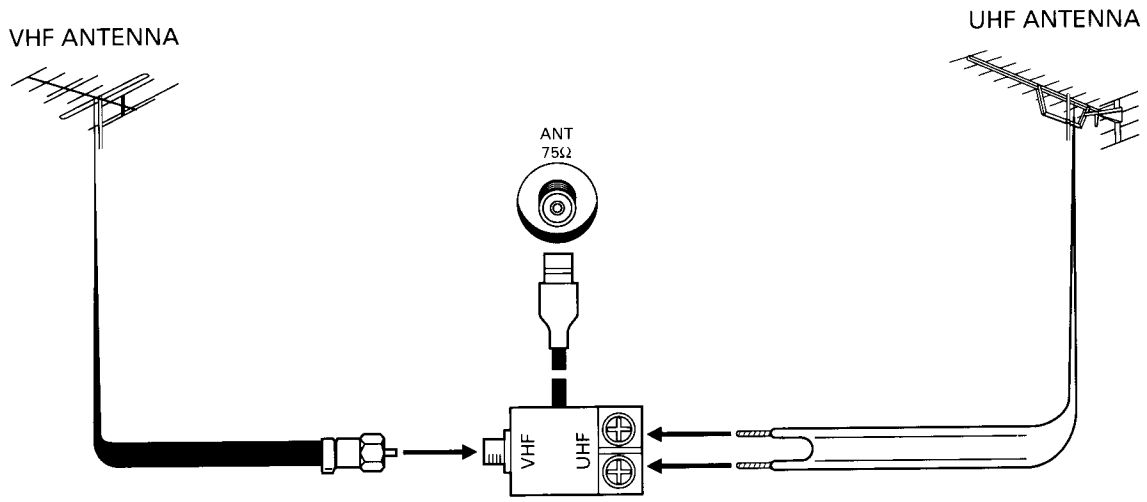

CABLE TV CONNECTIONS

Generally, the incoming cable for a Cable TV system can be connected directly to the TV antenna terminal just like a home antenna connection. Simply attach it to the ANT (75Ω) terminal. You will be able to receive unscrambled cable channels.

Cable without a decoder box (unscrambled channels)

Some cable companies offer "premium pay channels". Since the signals of these premium pay channels are scrambled, a cable TV converter/decoder is generally provided to the subscriber by the cable TV company. This decoder box is necessary for normal viewing of the scrambled channels. For more specific instructions on installing cable TV, consult your cable TV company.

Cable with a decoder box (unscrambled and scrambled channels)

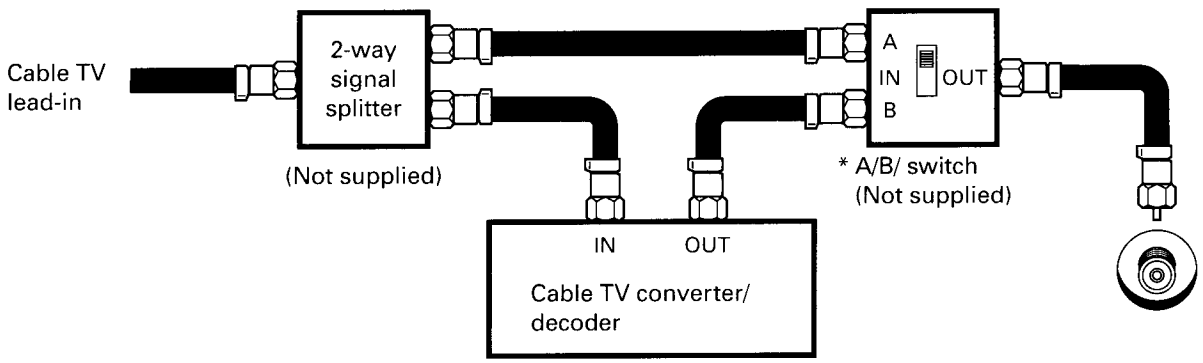

* "A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys. "B" position allows you to select scrambled channels via the converter/decoder box using the converter's channel keys. Place your TV on channel 3 or 4 to match the converter's output channel.

Notes:

- The descrambler device may or may not be a part of the cable converter.
- Since cable systems vary, you may wish to consult your local cable company for additional information.

ANTENNA/CABLE TV AND VCR CONNECTIONS

Antenna/Cable connection via VCR (simplified method)

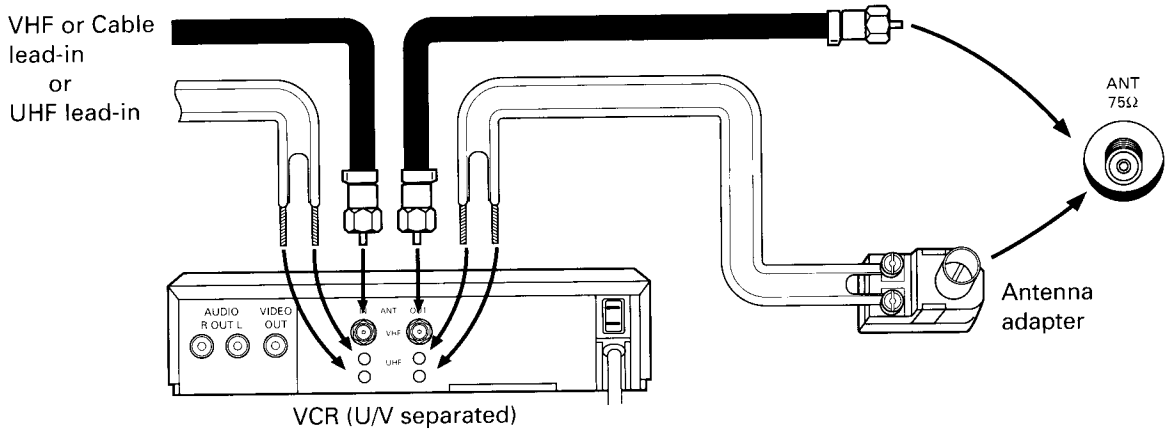

VCR (U/V separated)

Notes:

- On many VCR's, playing tapes causes the VCR's TV/VCR switching to disconnect the antenna signals from the TV. If you cannot select a certain channel, try pressing the TV/VCR button on the Remote Control.
- If you connect both VHF and UHF lead-in cables, use an optional U/V mixer. See page 5.

Using a 2-way signal splitter

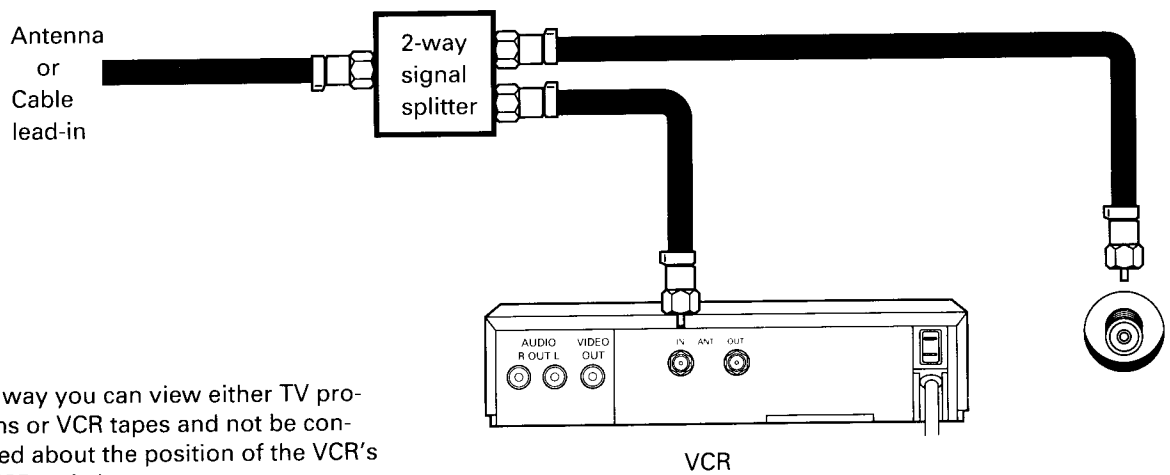

This way you can view either TV programs or VCR tapes and not be concerned about the position of the VCR's TV/VCR switch.

VCR

Note: When connected either way, the VIDEO/AUDIO connections from the VCR to the TV are required for (stereo) playback from VCR's. See page 33 for connection details.

ANTENNA/CABLE TV AND VCR CONNECTIONS (Continued)

Cable with a converter/decoder box

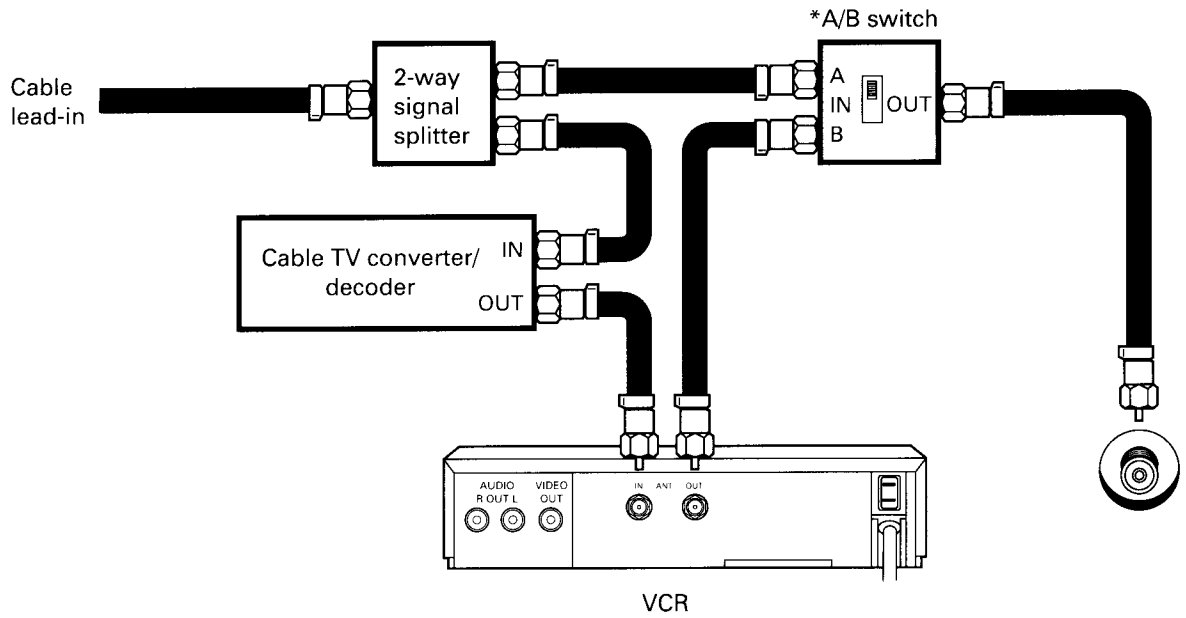

* "A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys. "B" position on the A/B switch allows you to select scrambled channels via the cable TV converter/decoder using the converter's channel keys. Place your TV and VCR on channel 3 or 4 to match the converter's output channel.

Note: When connected this way, the VIDEO/AUDIO connections from the VCR to the TV are required for stereo playback from stereo VCR's. See page 33 for connection details.

LOCATION OF CONTROLS (TV Set)

For specific use of each control, consult the corresponding page numbers in brackets.

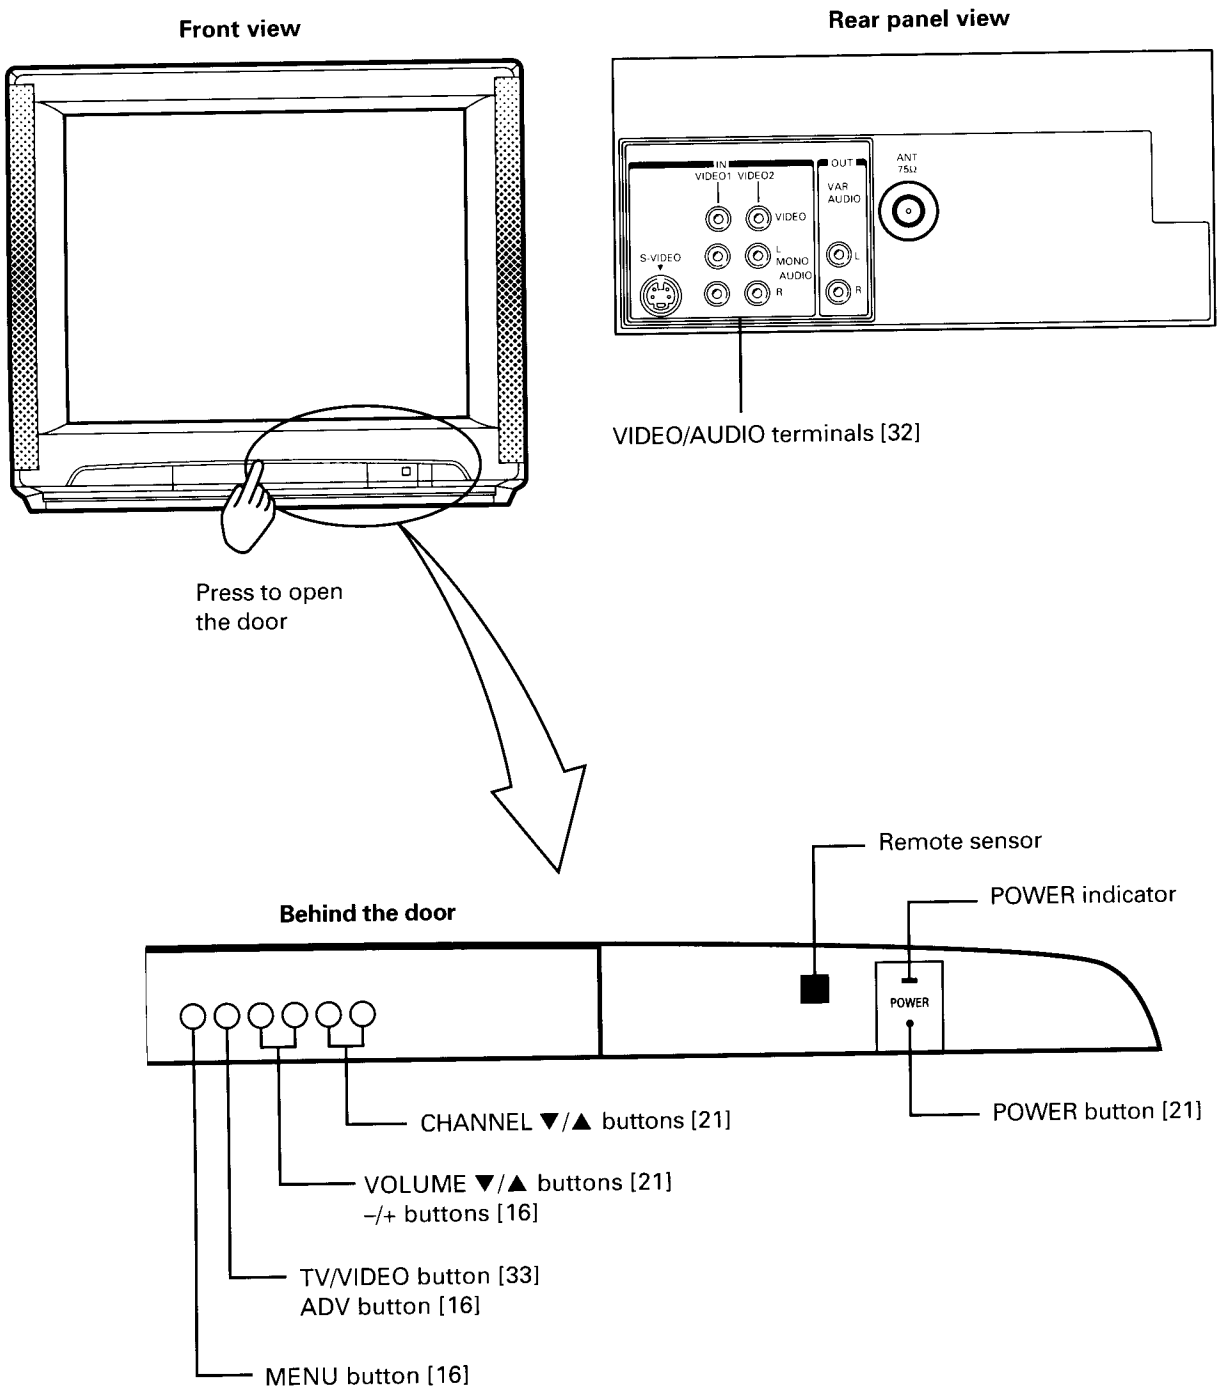

LOCATION OF CONTROLS (Remote Control)

Only the buttons that are used to operate the TV set are described here. The rest of the buttons are used to operate VCR's (page 12), and Cable TV Converters (page 13).
For details on the use of each control, refer to pages in brackets.

Aim at the remote sensor on the TV set

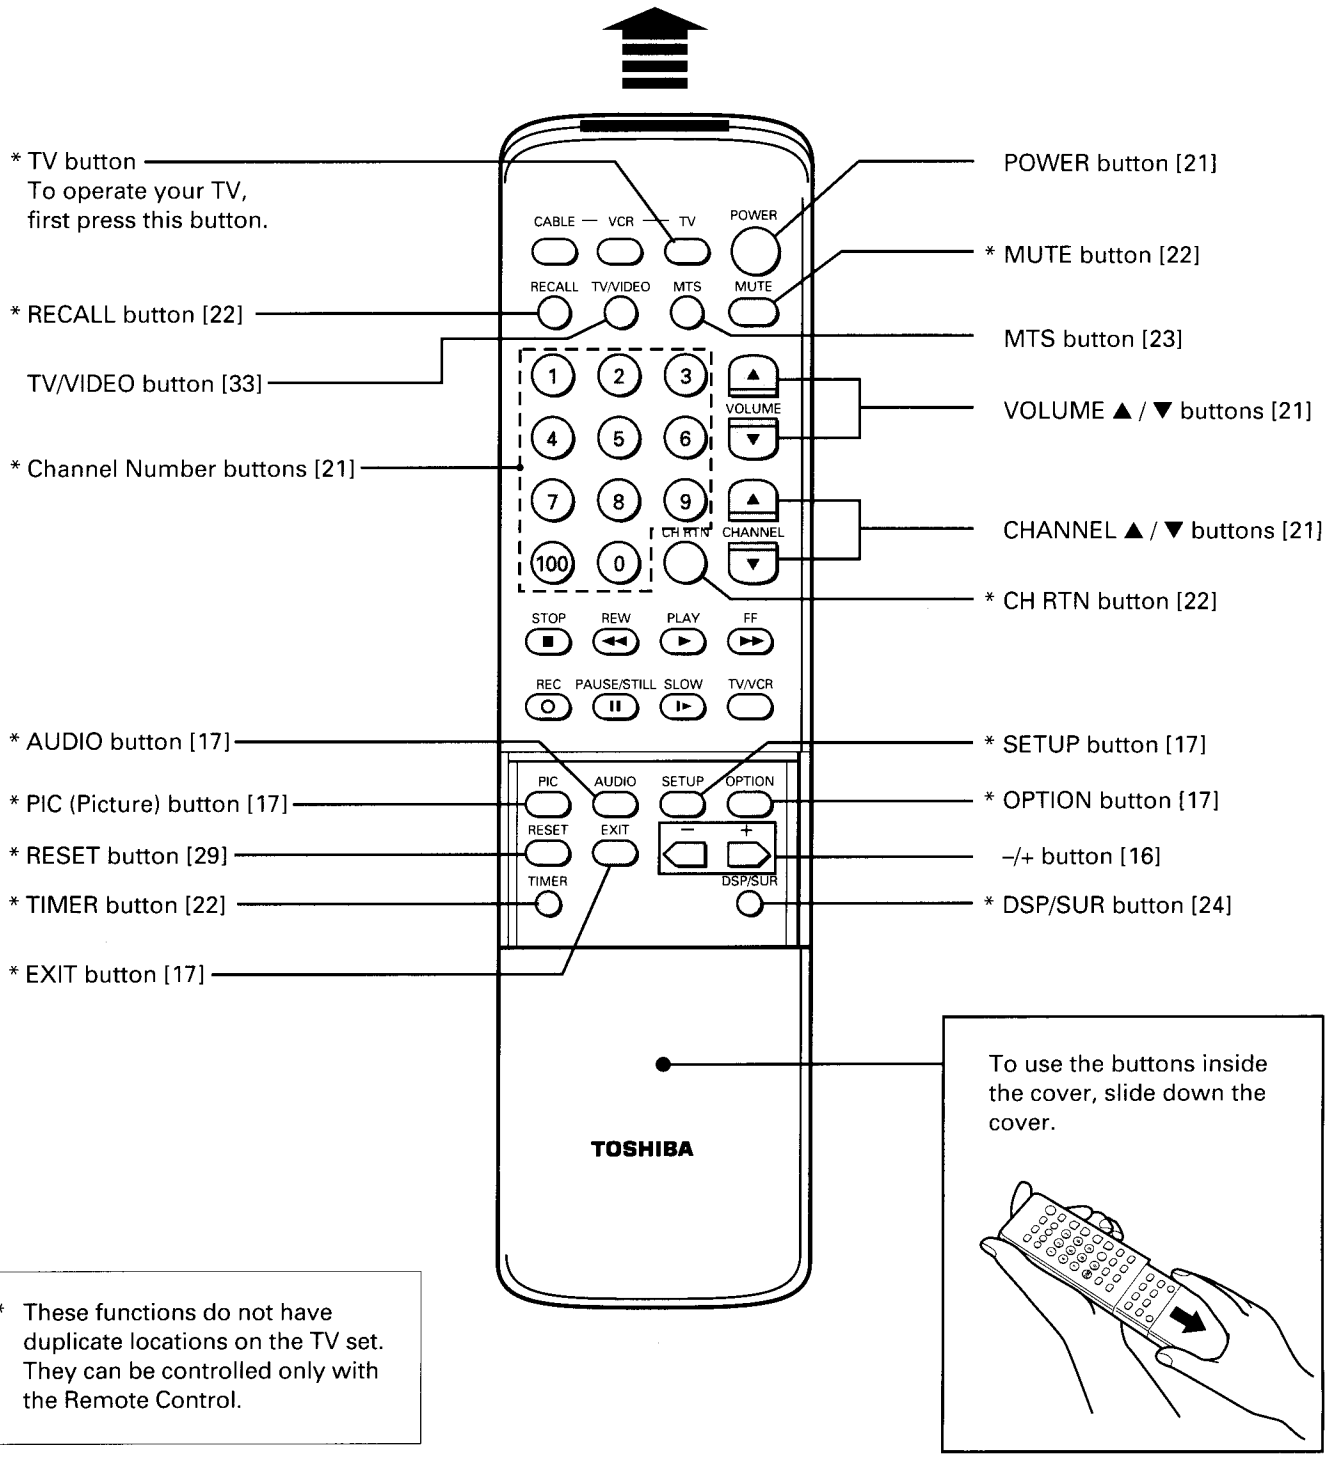

* These functions do not have duplicate locations on the TV set. They can be controlled only with the Remote Control.

BEFORE USING THE REMOTE CONTROL

INTRODUCTIONS

This Remote Control allows you to operate your TV set and most models of remote-controlled VCR's and Cable TV Converters even if they are different brands. However, this Remote Control must be programmed to control other brands of VCR's and/or Converters. If you will be using your TV set with a TOSHIBA VCR, your remote has already been preprogrammed for you.

- Before attempting to operate your Remote Control, install the batteries according to the section "INSTALLING AND REPLACING BATTERIES" shown below.
- For more detailed instructions, see the section "PROGRAMMING THE REMOTE CONTROL" on page 14.

Notes:

- After installing new batteries, the Remote Control will set itself to the codes for TOSHIBA's TV and VCR. If you are using the Remote Control to operate equipment that uses different codes, it will have to be reprogrammed for those codes.
- This Remote Control may have functions not available on the original remote control.
- These functions may or may not operate your VCR or Cable TV Converter. Refer to the owner's manuals supplied with the equipments to see which functions are available.
- The remote control supplied with your VCR or Cable TV Converter may have keys not duplicated on this Remote Control. If these functions are desired, the original remote will have to be used.

INSTALLING AND REPLACING BATTERIES

1 Place the Remote Control with the face down. Press down on the ridged area of the battery cover and slide it off.

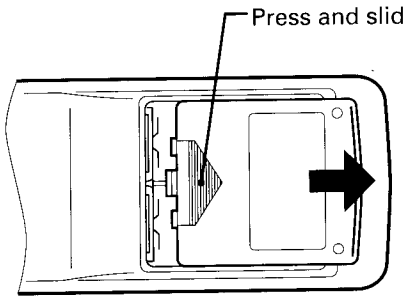

2 Place the four "AAA" size batteries, matching the + and – signs on each battery to the + and – signs of the battery compartment.

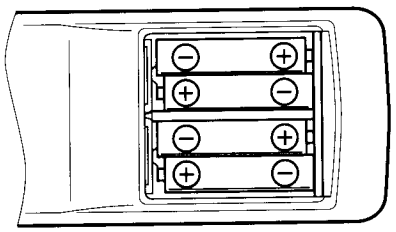

3 Replace the battery cover until the lock snaps.

TIPS FOR BEST OPERATION

- For optimum performance, aim the Remote Control directly at the equipment it is being used to operate and be sure there is no obstruction between the Remote Control and the equipment.
- If your Remote Control does not always adjust the set as you wish, you probably need to replace the batteries. See the directions at the left.
- Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the Remote Control for a long period, remove the batteries.

CAUTION:

- Do not throw your batteries into a fire. Dispose of your batteries in a designated disposal area.
- Do not combine used old batteries with new ones.
- Do not mix battery types.

USING THE REMOTE CONTROL WITH VCR

- To control a TOSHIBA VCR, first press the VCR button to put the Remote in the "VCR mode". The buttons shown below will then control the VCR.
- If you have another brand of VCR, you can probably program your Remote to control it. Details are on page 14.

Aim at the VCR

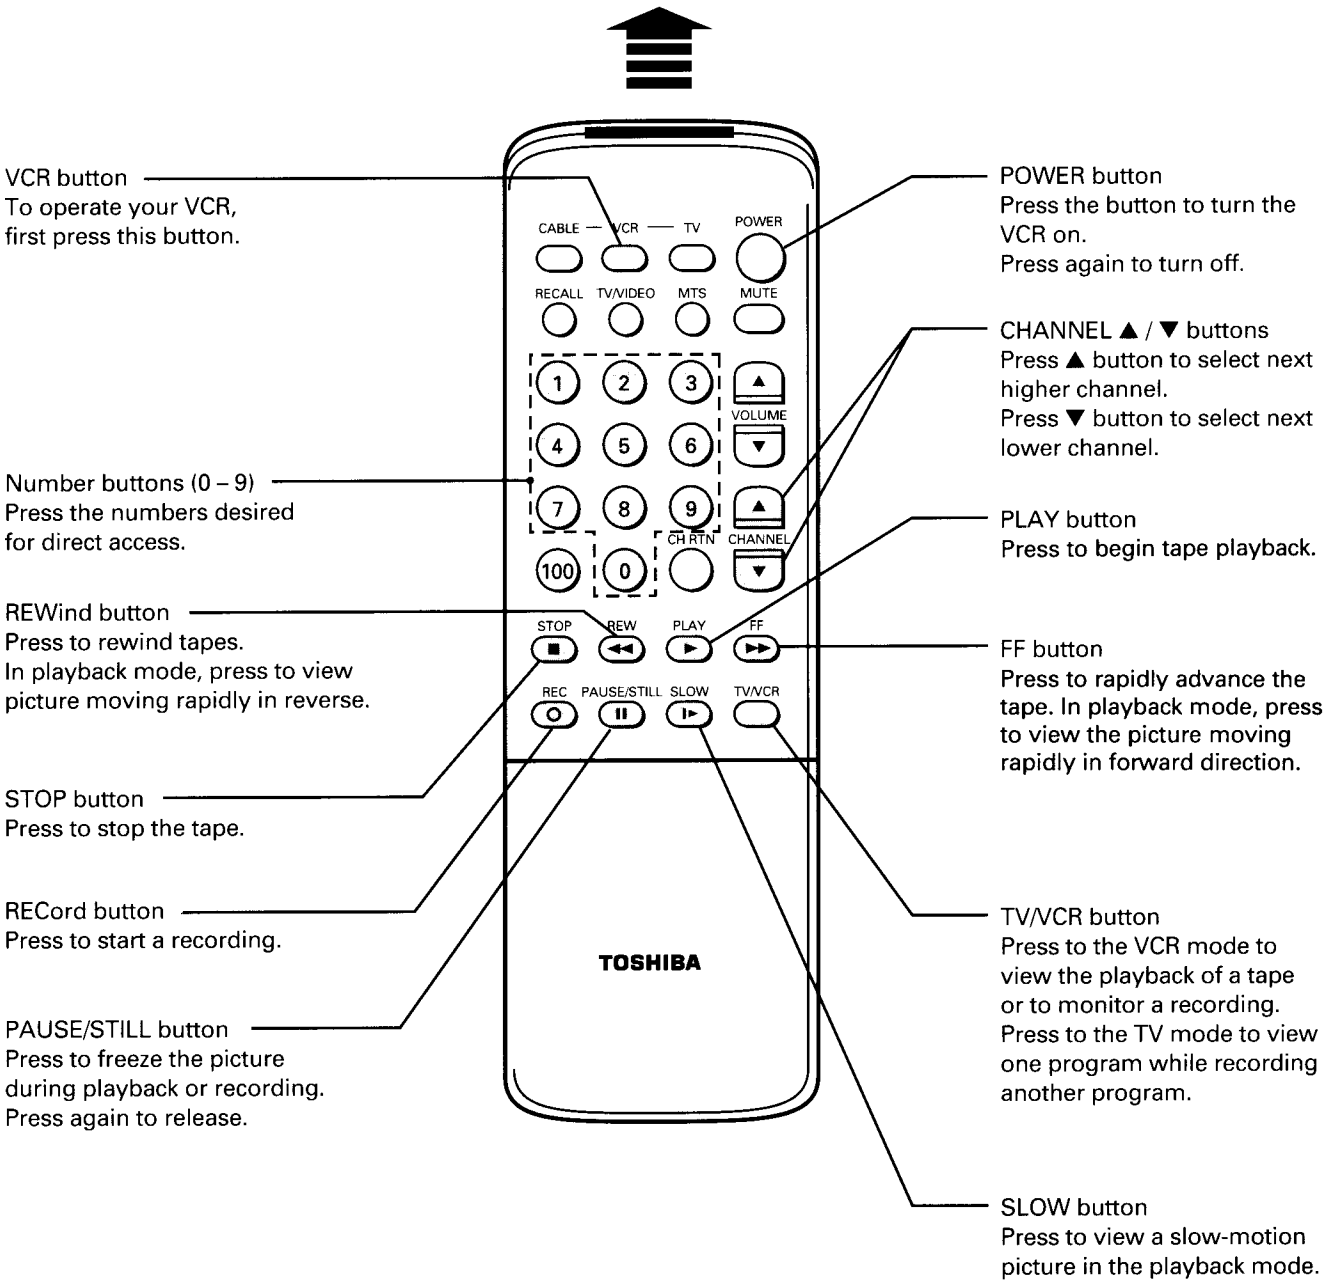
VCR button
To operate your VCR, first press this button.
Number buttons (0 – 9)
Press the numbers desired for direct access.
REWind button
Press to rewind tapes.
In playback mode, press to view picture moving rapidly in reverse.
STOP button
Press to stop the tape.
RECord button
Press to start a recording.
PAUSE/STILL button
Press to freeze the picture during playback or recording.
Press again to release.
POWER button
Press the button to turn the VCR on.
Press again to turn off.
CHANNEL ▲ / ▼ buttons
Press ▲ button to select next higher channel.
Press ▼ button to select next lower channel.
PLAY button
Press to begin tape playback.
FF button
Press to rapidly advance the tape. In playback mode, press to view the picture moving rapidly in forward direction.
TV/VCR button
Press to the VCR mode to view the playback of a tape or to monitor a recording.
Press to the TV mode to view one program while recording another program.
SLOW button
Press to view a slow-motion picture in the playback mode.
CABLE
VCR
TV
POWER
RECALL
TV/VIDEO
MTS
MUTE
VOLUME
CH RTN
CHANNEL
STOP
REW
PLAY
FF
REC
PAUSE/STILL
SLOW
TV/VCR
TOSHIBA

Note: The VOLUME ▲ / ▼ and MUTE buttons always control the TV set regardless of the CABLE, VCR or TV button position. When using these buttons, aim the Remote Control at the TV set.

USING THE REMOTE CONTROL WITH CABLE TV CONVERTER

- To control a Cable TV converter, first press the CABLE button to put the Remote in the "CABLE mode".
- This Remote Control is designed to control several brands of Cable TV converter. If this Remote does not control your converter, you can probably also program your Remote to control it. Details are on page 14.

Aim at the Cable TV Converter

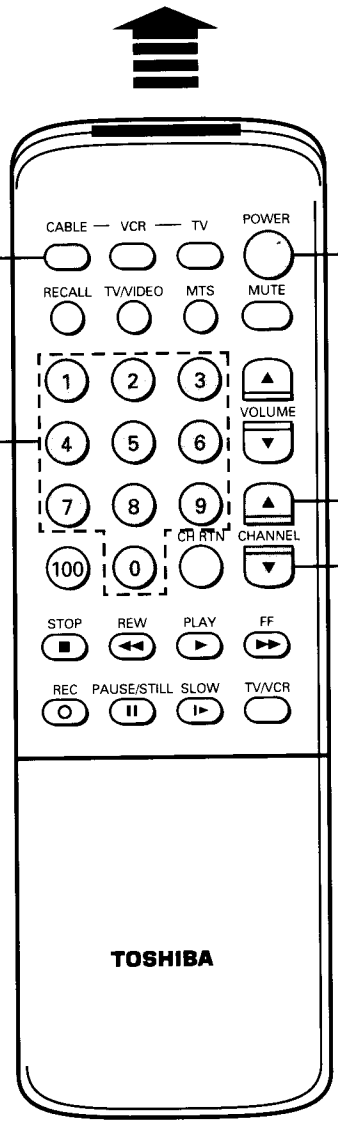

CABLE button
To operate your Cable converter, first press this button.

Numbered buttons (0 – 9)
Press the numbers desired for direct access.

POWER button
Press the button to turn the Cable converter on.
Press again to turn off.

CHANNEL ▲ / ▼ buttons
Press ▲ button to select next higher channel.
Press ▼ button to select next lower channel.

Note: The VOLUME ▲ / ▼ and MUTE buttons always control the TV set regardless of the CABLE, VCR or TV button position. When using these buttons, aim the Remote Control at the TV set.
If your Cable TV converter has a volume control, adjust it for maximum volume level. Then adjust the volume using the VOLUME ▲ / ▼ buttons on this Remote.

PROGRAMMING THE REMOTE CONTROL

Before using this Remote Control, it must be programmed to recognize the brands of the VCR and Cable TV Converter box it will be used to operate. If you are using a TOSHIBA VHS VCR, it has already been programmed for you. Otherwise, follow the steps below.

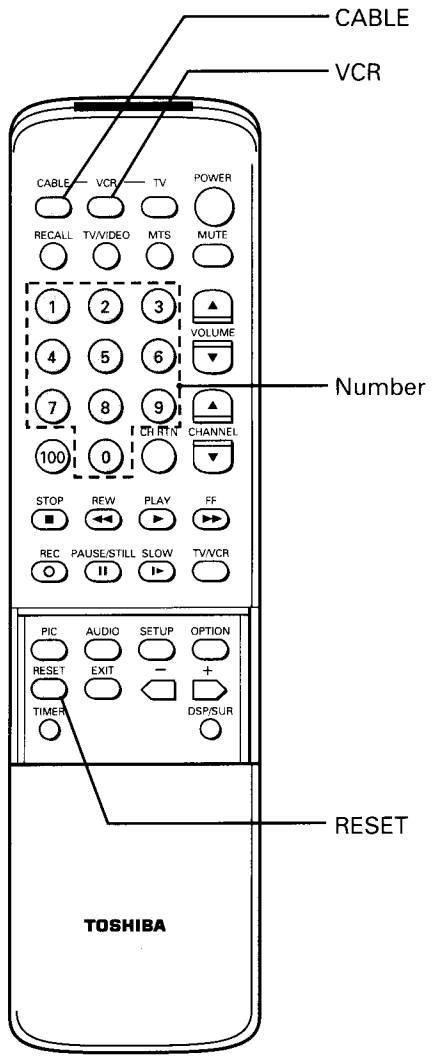

For future reference, write the code you used.

VCR CODE: _____

CABLE CODE: _____

TO CONTROL YOUR VCR

1 Refer to the "VCR CODE TABLE" on the next page to find the code number that corresponds to the brand name of your VCR.
Keep this number in mind.
If more than one number is listed, you may need to try each one separately until you find the one that works.

2 Press **VCR**.

3 Press **RESET**.

4 Press two **Number** buttons (within three seconds of pressing the RESET button) to enter the code number for your brand of VCR.

5 Point the Remote at the VCR and press the POWER button to test the code number.
— **If the right number was entered,** the VCR should turn on.
— **If the VCR does not respond to the Remote Control,** repeat steps 1 thru 5 with another code number.

TO CONTROL YOUR CABLE TV CONVERTER

1 Refer to the "CABLE TV CONVERTER CODE TABLE" on the next page to find the code number that corresponds to the brand name of your converter.

2 Press **CABLE**.

3 Press **RESET**.

4 Press two **Number** buttons (within three seconds of pressing the RESET button) to enter the code number for your brand of converter.

5 Point the Remote at the converter and press the POWER button to test the code number.
If the converter does not respond to the Remote Control, repeat steps 1 thru 5 with another code number.

Note:
- You have to reprogram the Remote Control when you change its batteries.
- Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2".
If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

VCR CODE TABLE

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
AKAI	03, 22, 63, 66	PHILCO	53, 56
CANON	53	PIONEER	33, 50
CAPEHART	01	PORTLAND	44, 52
CITIZENS AND CABLE	44, 52	QUASAR	53
CURTIS MATHES	46, 53, 67	RCA	00, 28, 35, 37, 54
DAEWOO	52	REALISTIC	43, 53
EMERSON	10, 20, 23, 34, 41, 47, 49, 57, 62, 65, 68	SAMSUNG	07, 32, 42
		SANYO	02
FISHER	12, 18, 19, 43, 48, 58	SCOTT	66
GE	07, 53	SEARS	43
GOLDSTAR	09, 60	SHARP	06, 24, 39, 45
HITACHI	05, 36	SHINTOM	31, 55
JC PENNEY	51, 53	SONY	17, 26, 38
JVC	16, 30	SYLVANIA	53
KENWOOD	46	TEAC	15
MAGNAVOX	29, 53	TEKNIKA	21
MARANTZ	46, 61	TMK	67
MITSUBISHI	04, 27, 40	TOSHIBA	13
NEC	14, 46, 59, 64	VIDEO CONCEPTS	46
PANASONIC	08, 53	WARDS	25
PENTAX RESEARCH	46	ZENITH	11

CABLE TV CONVERTER CODE TABLE

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
ABC	53, 54	PIONEER	20, 44
DIAMOND	56	PIONEER CABLE	18
GI STARCOM	25	REGANCY	02, 33
HAMLIN	12, 13, 34, 48	SAMSUNG	44
HITACHI	37, 43	SCIENTIFIC ATLANTA	21, 35
JERROLD STARCOM	30	SILVANIA	59
JERROLD	04, 05, 15, 23, 24, 25 36, 45, 46, 47	STARGATE 2000	58
		TEKNIKA	06
MACOM	37, 43	TEXSCAN	10, 11, 59
MAGNAVOX	26, 28	TOCOM	17, 21, 49, 50, 55
NSC	09	UNIKA	31, 32, 41
OAK SIGMA	16	UNIVERSAL	51, 52
OAK	01, 38	VIEWSTAR	07, 08
PANASONIC	03, 27, 39	WARNER AMEX	44
PHILIPS	19, 29, 40	ZENITH	14, 42, 57

MENU FUNCTION (General Instructions)

We suggest you familiarize yourself with the procedure before using the Menu function.
To adjust any TV feature, the use of the Menu function is required. The adjustments that can be made to the TV appear on the screen.

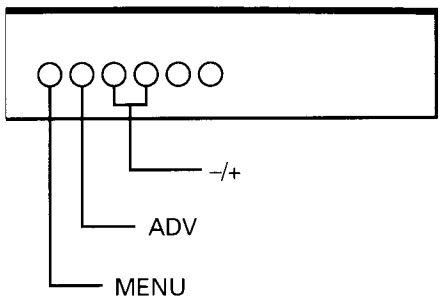

MENU BUTTON (on TV)

Each time you press **MENU**, the Picture, Audio, Set up or Option menu on-screen display is selected in order, then press **ADV**.

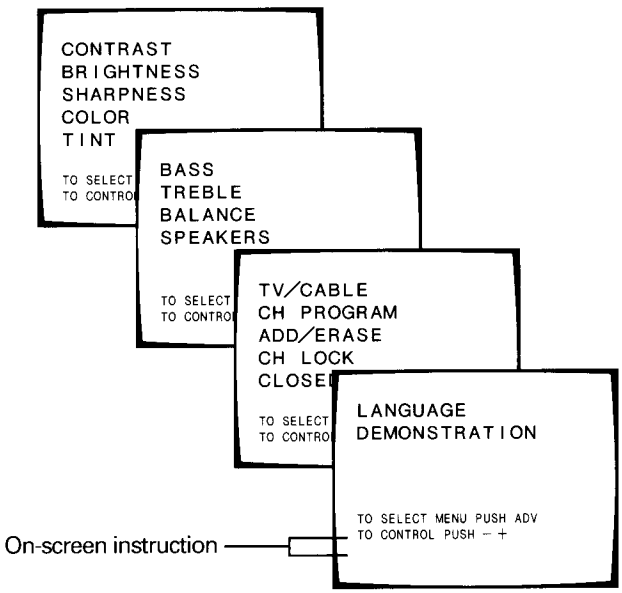

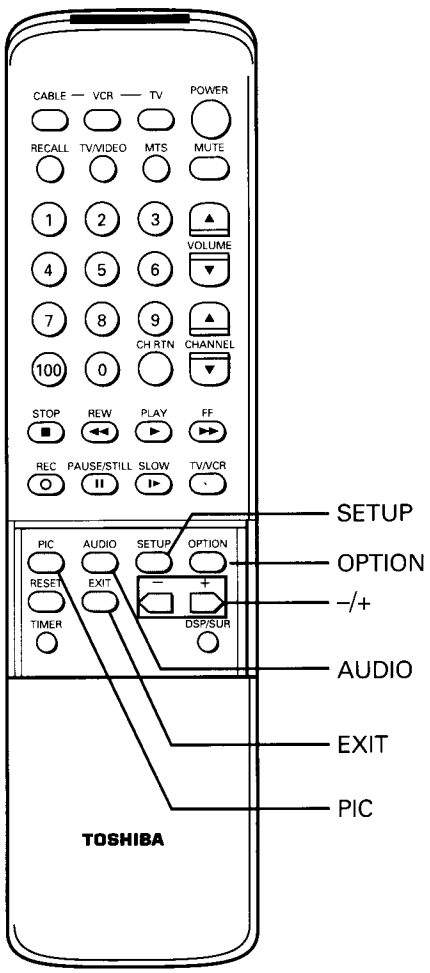

ADV BUTTON (on TV)

Use this **ADV** after you have pressed **MENU** to select the function you want to adjust.
Each time you press **ADV**, the function to be adjusted will be selected in numerical order.
The selected function will be displayed in magenta.

–/+ BUTTONS (on TV and on Remote)

Use these **–/+** after you have pressed **ADV** or any of the four menu buttons **(PIC, AUDIO, SETUP or OPTION)**.

Example: CONTRAST adjustment mode display

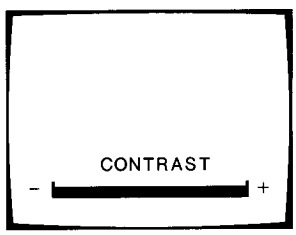

Pressing + increases the picture contrast.
Pressing – increases the picture contrast.

PIC (Picture) BUTTON (on Remote)

Press **PIC** repeatedly until the Picture menu function you want to adjust is selected.
The selected function will be displayed in magenta, then press **–/+** to adjust the setting.
Details for each function begin on page 28.

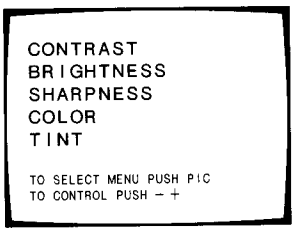

AUDIO (Audio) BUTTON (on Remote)

Press **AUDIO** repeatedly until the Audio menu function you want to adjust is selected.
The selected function will be displayed in magenta, then press **–/+** to adjust the setting.
Details for each function begin on page 29.

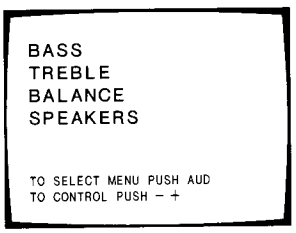

SETUP BUTTON (on Remote)

Press **SETUP** repeatedly until the Set up menu function you want to adjust is selected.
The selected function will be displayed in magenta, then press **–/+** to adjust the setting.
Details for each function begin on page 19.

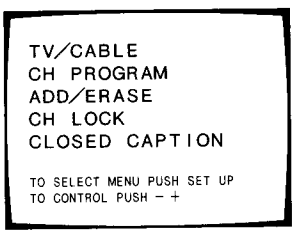

OPTION BUTTON (on Remote)

Press **OPTION** repeatedly until the Option menu function you want to adjust is selected.
select the function.
The selected function will be displayed in magenta, then press **–/+** to adjust the setting.
Details for each function begin on page 30.

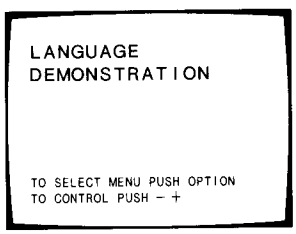

EXIT BUTTON (on Remote)

The above four menu displays will automatically disappear from the screen if no control has been operated for about 15 seconds, and all other menu displays also disappear after about 6 seconds.
If you want to clear the screen of all on-screen displays instantly, press this button.

Notes:

- The ADV button on the TV will function as the TV/VIDEO button when no menu display is on the screen.
- The –/+ buttons on the TV will function as the VOLUME ▼/▲ buttons when no menu display is on the screen.

TV CHANNELS

This TV will receive the following TV signals:

1. TV: Off the air TV signals. (VHF channels 2 thru 13 and UHF channels 14 thru 69)
2. STD CABLE: Standard (or IRC: Incremental Related Carrier) cable TV signals.
3. HRC CABLE: Harmonic Related Carrier cable TV signals.
4. IRC CABLE: Incremental Related Carrier cable TV signals.

For each of these systems, your TV set has exact frequencies built into it to ensure precise tuning. For precise tuning, the TV/CABLE function must be set to match your TV or CABLE system (See the next page.). The following chart shows channels available in each system and how your TV displays them. When you connect your TV to a cable TV system and if you are not sure what system they are using, proceed with the following section "HOW TO FIND YOUR TYPE OF CABLE SYSTEM" or consult your local cable company to check if your system is STD, HRC or IRC.

HOW TO FIND YOUR TYPE OF CABLE SYSTEM

1 Select the "STD CABLE" mode following the instructions on the next page.

2 Select various channels and confirm whether the channel will lock immediately with perfect picture. If the channels seem to take a few seconds to lock in, your cable system may be one of the other cable systems. In this case, continue with the following steps.

3 Select the "HRC CABLE" mode and try above procedure again.

4 If you are having problem with only channel 5 or 6, you may have an IRC system so change the mode to the "IRC CABLE".

TV/CABLE CHANNEL REFERENCE CHART

Number on this TV	Corresponding channel number	
	TV off the air	Cable TV STD/HRC/IRC
1	–	A-8
2	2	2
3	3	3
4	4	4
5	5	5 (A-7)
6	6	6 (A-6)
7	7	7
8	8	8
9	9	9
10	10	10
11	11	11
12	12	12
13	13	13

14	14	A
15	15	B
⋮	⋮	⋮
35	35	V
36	36	W
37	37	AA
38	38	BB
⋮	⋮	⋮
61	61	YY
62	62	ZZ
63	63	AAA
64	64	BBB
65	65	65
66	66	66
67	67	67
68	68	68
69	69	69

70		70
71		71
⋮		⋮
93		93
94		94
95		A-5
96		A-4
97	Not used	A-3
98		A-2
99		A-1
100		100
101		101
⋮		⋮
124		124
125		125

Note: The above chart is typical of many cable system channel allocations. However the numbering system may differ in your area. If in doubt, consult your local cable company.

PROGRAMMING CHANNEL MEMORY

The channel memory is the list of TV channel numbers your TV will stop on when you press the CHANNEL ▲ or ▼ button.
First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area.
If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

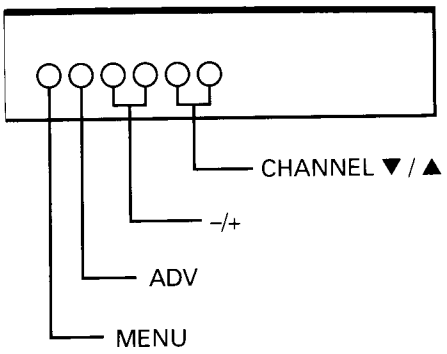

TV/CABLE FUNCTION

1 Press **POWER** to turn on the TV.

2 Press **SETUP** on the Remote Control (or **MENU** on the TV) to display the Set up menu on the screen.

3 Press **SETUP** repeatedly or **ADV** on the TV until "TV/CABLE" is displayed in magenta.

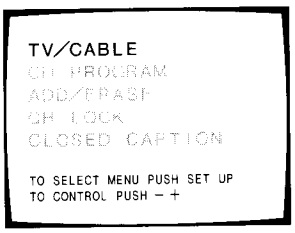

4 Press – or + until the mode that corresponds to your TV signal system is displayed in magenta.
Each time you press the button, the TV, STD CABLE, HRC CABLE or IRC CABLE mode will be selected in order.

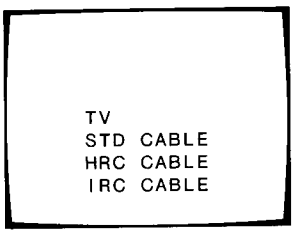

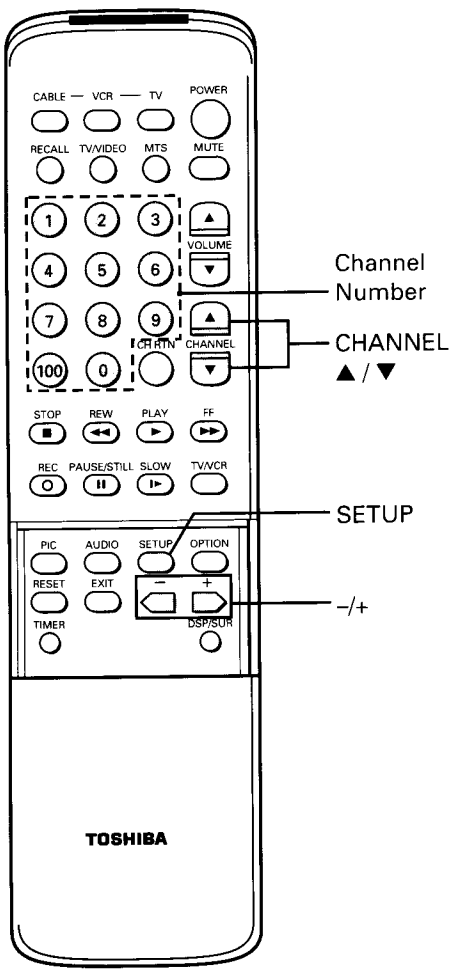

CH PROGRAM FUNCTION

1 Select "CH PROGRAM" following steps 2 and 3 above.

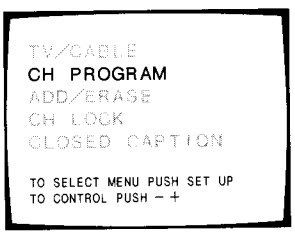

2 Press – or + to start channel programming.
The TV will automatically cycle through all the TV or CABLE channels on the mode selected by the TV/CABLE function and store active channels in the channel memory.

3 When channel programming is complete, you will see the message at the right.

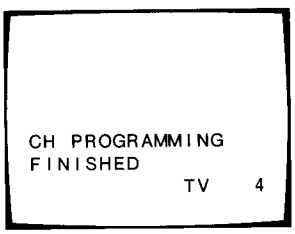

4 Press **CHANNEL** ▲ or ▼ to make sure the channel programming has been done properly.

PROGRAMMING CHANNEL MEMORY (Continued)

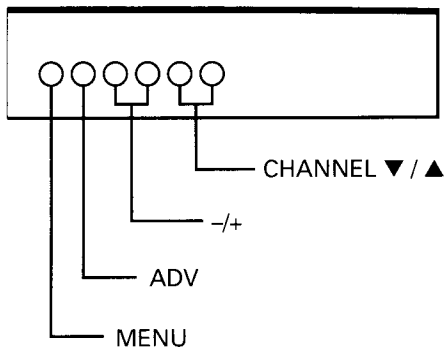

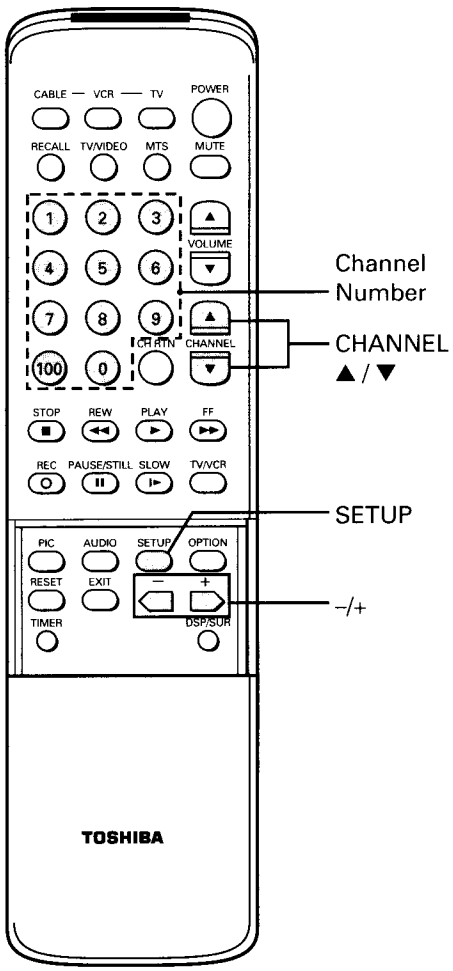

ADD ERASE FUNCTION

First follow the instructions "CH PROGRAM FUNCTION" and then add or erase individual channels as desired.

1 Select the channel you want to erase using the **CHANNEL** ▲ or ▼ button, or select the channel you want to add using the **Channel Number** buttons.

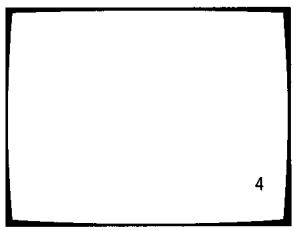

2 Press **SETUP** on the Remote Control (or **MENU** on the TV) to display the Set up menu on the screen.

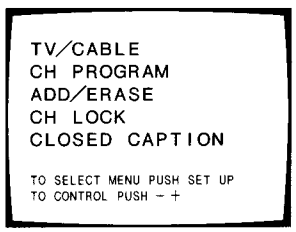

3 Press **SETUP** repeatedly or **ADV** on the TV until "ADD/ERASE" is displayed in magenta.

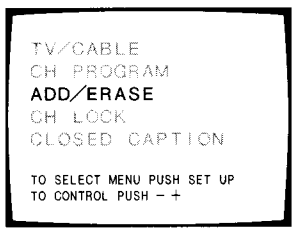

4 Press – or + :

To erase the channel
Press the button until "CH ERASE" is displayed in magenta indicating that the channel has been erased from the memory.

To add the channel
Press the button until "CH ADD" is displayed in magenta indicating that the channel has been memorized.

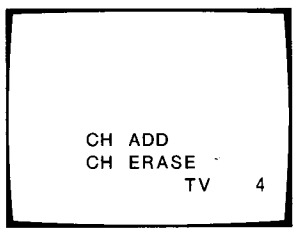

5 Repeat steps 1 to 4 for other channels.

You have now completed the channel programming.

WATCHING TV PROGRAMS

● First press the TV button on the Remote Control.

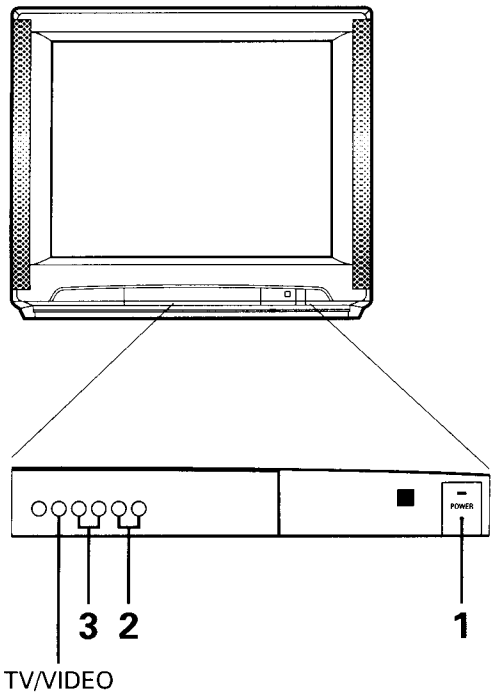

1 Press **POWER** to turn on the TV.

To turn off the TV, press **POWER** again.

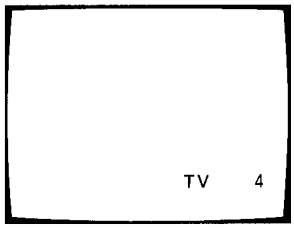

2 Select a channel in one of the following two ways.

- **To scan the memorized channels in numerical sequence**
  Press CHANNEL ▲ to select the next higher channel.
  Press CHANNEL ▼ to select the next lower channel.
  Press the button again to select the next memorized channels.
- **To select a channel directly**
  Press the **Channel Number** buttons (0-9 and 100).
  To select channel 4, press "4" (or press "0","4").
  To select channel 38, press "3","8".
  To select channel 125, press "100","2","5" in sequence.

If you cannot select certain channels, either TV (off the air) or CABLE channels
Check if the TV/CABLE function is properly set. See page 19.

3 Press VOLUME ▲/▼ to adjust the volume.
To increase the volume, press ▲.
To decrease the volume, press ▼.

Note:
The VOLUME ▼/▲ buttons on the TV function as the menu –/+ buttons while any of the menu displays (Picture, Audio, Set up or Option) are on the screen.

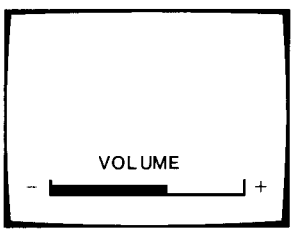

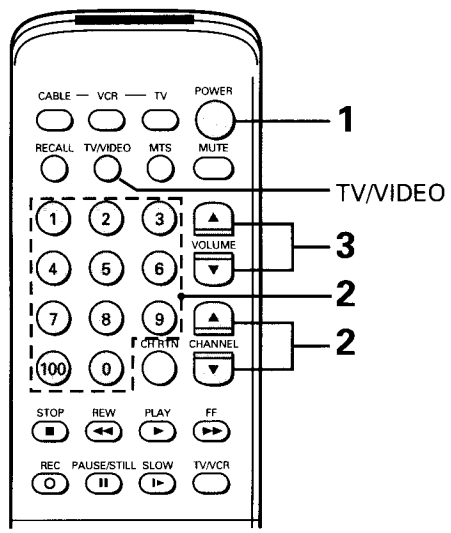

Watching Video Input

The TV/VIDEO button is used to view the signals coming from other devices like VCR's or Video Disc Players connected to this TV. Details are on page 33.

Auto-Power-Off

If a vacant channel is tuned or TV broadcast for a day is finished, the TV will automatically turn off after about 15 minutes.
This feature does not operate in the VIDEO mode.

Last Mode Memory

If the power is cut off while you are viewing the TV and the power is resupplied, the TV is turned on automatically by the ***Last Mode Memory*** feature. If the power is going to be off or when you leave home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.

CONVENIENT REMOTE FUNCTIONS

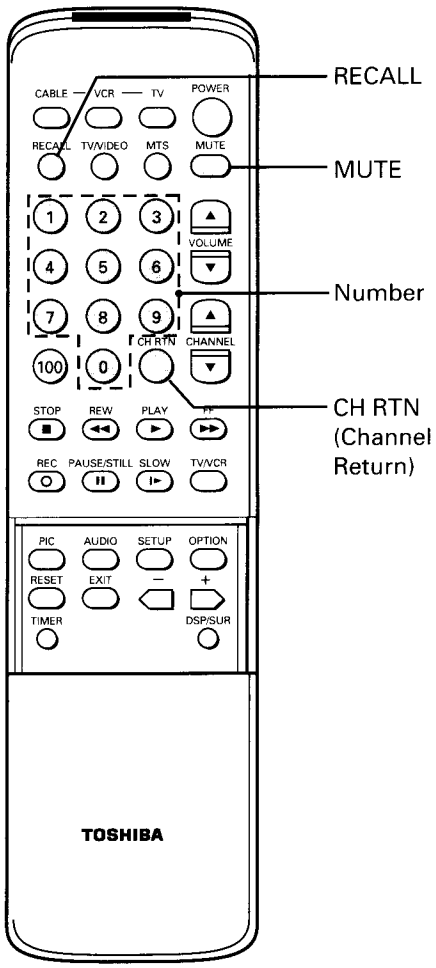

TO DISPLAY ON-SCREEN INFORMATION

Press **RECALL** to display the following on-screen information.

- Channel number or VIDEO mode selected.
- Closed Caption or Text program status.
- Stereo or SAP audio status.

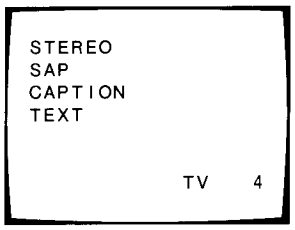

TO MUTE THE SOUND

Press **MUTE** to mute the sound immediately without affecting the picture. The word "MUTE" will be displayed on the screen as shown. This is useful during telephone calls or other interruptions.
To restore the sound, press **MUTE** again.

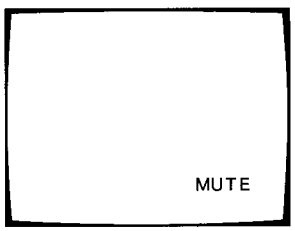

TO CHANGE QUICKLY BETWEEN TWO CHANNELS

Press **CH RTN** to return to the last channel that was tuned previously. This is useful should you want to view two channels. This allows you to view two programs without entering an actual channel number each time.

To operate this function

1 Select the first channel you want to view.

2 Select the other channel with the Channel Number buttons.

3 Press **CH RTN**.
The previous channel will return.

Each time you press **CH RTN**, the TV will switch back and forth between the two channels.

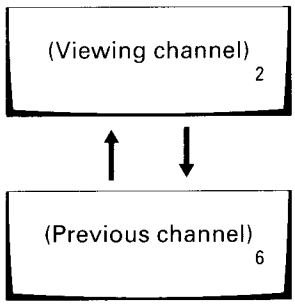

TO SET THE OFF (SLEEP) TIMER

With the OFF timer, you can set the TV to turn off automatically after a pre-determined period of time (every 10 minutes, up to 180 minutes = 3 hours).

1 Press **TIMER** to select the TIMER mode.

2 Press two **Number** buttons to enter the length of time you want the TV to stay on.

Example: 120 minutes
Press 1 and 2.

3 Press **TIMER** to start the timer.
The display color will change from magenta to cyan, and then the display will go off.

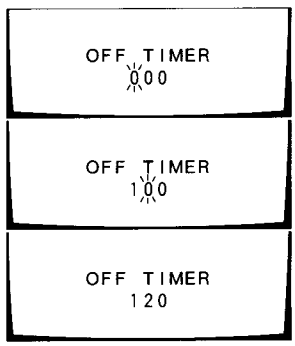

Notes on the off-timer:

- To display the time remaining, press **TIMER** once. The remaining time will be displayed on the screen. To erase the display, press **TIMER** again.
- To cancel the settings, press **POWER** twice, once to turn the TV off and once to turn it on again.

SELECTING STEREO/SAP BROADCASTS

The MTS (Multi-channel TV Sound) feature TV allows you to improve your TV viewing with high fidelity stereo sound. MTS also provides for an extra channel, SAP (Second Audio Program), used to transmit a second language or other audio information.

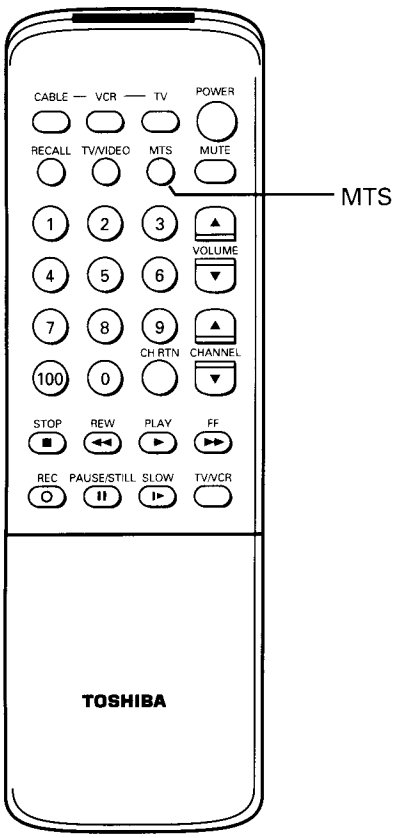

LISTENING TO STEREO SOUND

1 When the TV receives a stereo broadcast, the word "STEREO" is displayed on the screen whenever the TV is turned on, a channel is selected, or the RECALL button is pressed.

2 Press **MTS** until "STEREO" is displayed on the screen in magenta.

Normally this function can be left in the STEREO mode. Your TV will then automatically reproduce either stereo or monaural sound, whichever is broadcast.

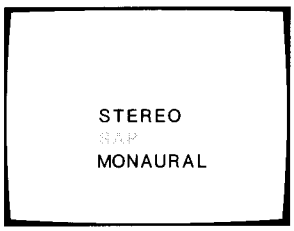

LISTENING TO SECOND LANGUAGE

1 When the TV receives a SAP broadcast, the word "SAP" is displayed on the screen.

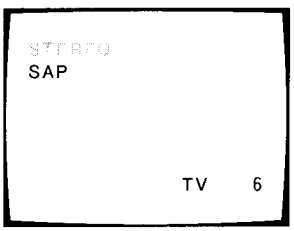

2 Press **MTS** until "SAP" is displayed in magenta.
You will hear only the second language from the left and right speakers.

If the stereo sound is noisy
If a broadcast signal is not strong enough, and noise-free stereo sound is not available, select the MONAURAL mode. The noise should be reduced.

Notes:
- Be sure you have selected the STEREO mode if broadcast is in stereo.
- If the "STEREO" (or "SAP") is not displayed in spite of a known MTS broadcast, select the STEREO or SAP mode by pressing the MTS button again.
- The MTS button will not function in the VIDEO mode.

ENHANCING THE SURROUND SOUND EFFECT

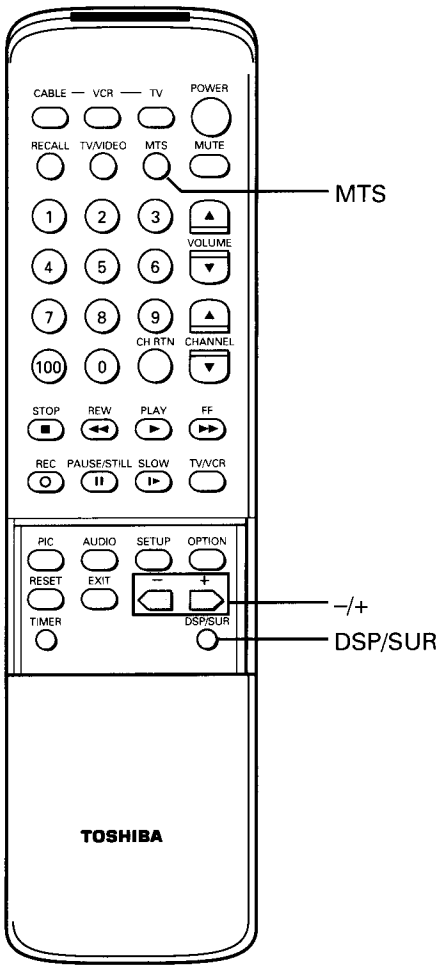

TO ACTIVATE SURROUND FUNCTION

1 Press **MTS** to select the STEREO mode.

2 Press **DSP/SUR** on the Remote Control to call up the Surround ON/OFF mode on-screen display as shown.

Press the button until "SURROUND ON" is displayed in magenta.

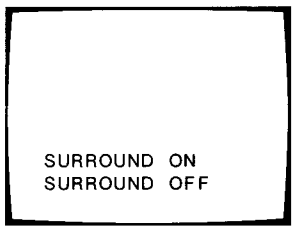

The Surround function has now been activated.

3 **To adjust the Surround level**
Press – or + while the Surround ON/OFF mode display shown above is on the screen to call up the Surround adjustment mode display.

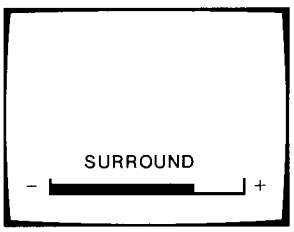

Press + to increase Surround level.
Press – to decrease Surround level.

To deactivate the Surround
Select "SURROUND OFF" in the Surround ON/OFF mode display.

Note: Normally you can leave the MTS button set to "STEREO" and the Surround function set to "ON". The TV will automatically produce either Surround stereo or monaural, whatever is broadcast.

LOCKING CHANNELS

This feature allows you to program the TV so that any specific channel cannot be viewed without the use of the Channel Number buttons on the Remote Control.
This TV has 4 memory spaces total for the TV mode and CABLE mode respectively.

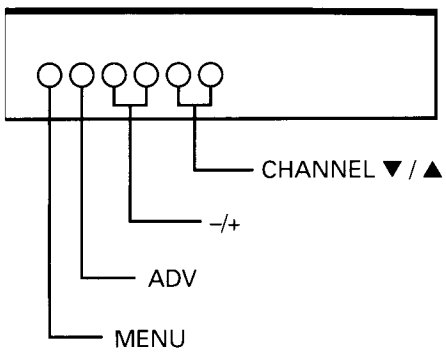

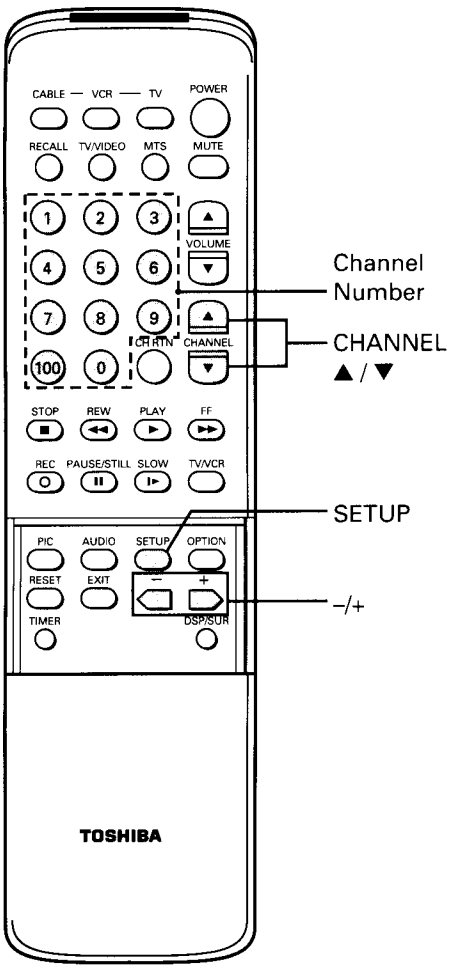

TO LOCK OUT CHANNELS

1 Select a channel you want to lock out. (Example: channel 4)

2 Press **SETUP** on the Remote Control (or **MENU** on the TV) to display the Set up menu on the screen.

3 Press **SETUP** repeatedly (or **ADV** on the TV) until "CH LOCK" is displayed in magenta.

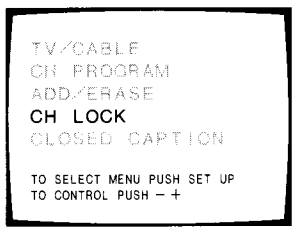

4 Press - or + until the channel number you selected "4" replaces the zero "0" in the channel lock program display.

The program display will remain for about 4 seconds.

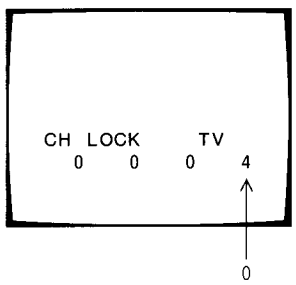

5 Repeat steps 1 to 4 for other channels.

6 Select another channel, or turn off the TV set if desired.

If you want to know the channels you have locked out

Call up the channel lock adjustment mode display using the SETUP button and –/+ buttons.

TO RESTORE CHANNELS

1 Select the channel you want to restore to normal viewing by pressing the Channel Number buttons.

2 Select "CH LOCK" following steps 2 and 3 above.

3 Press – or + until the zero "0" replaces the channel number display "4" you want to restore in the channel lock program display.

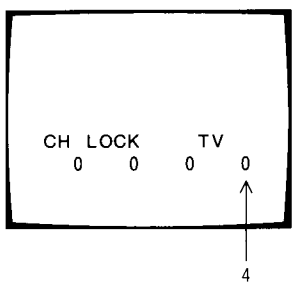

4 Repeat steps 1 to 3 for other channels.

OPERATING CLOSED CAPTIONING FEATURE

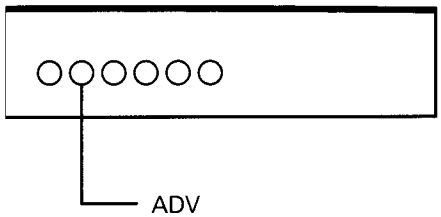

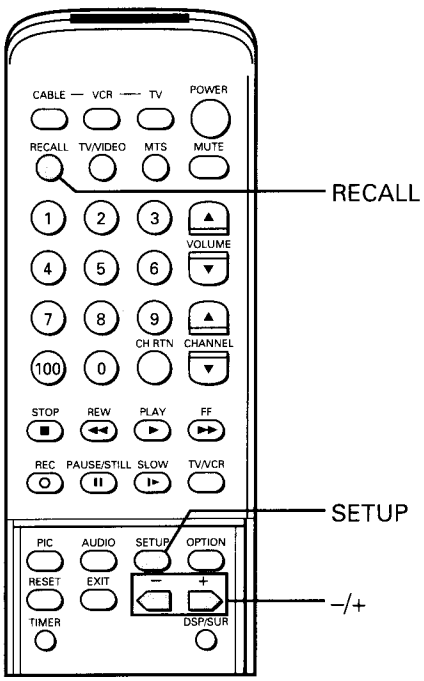

TO VIEW CAPTIONS

Closed captioning is a printed version of the dialogue, narration, and/or sound effects of a TV program.
Captions will appear at either the top or bottom of the screen during captioned broadcasts as shown.
Captioning is especially helpful for hearing impaired individuals.

1 Select the desired program.

2 Press **RECALL** to check if the program is being captioned. If it is, the word "CAPTION" is displayed on the screen. The captioned programs are usually notated on your local TV listings by its service marks such as "CC".

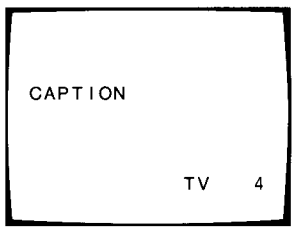

3 Press **SETUP** on the Remote Control (or **MENU** on the TV) to display the Set up menu on the screen.

4 Press **SETUP** repeatedly on the Remote Control (or **ADV** on the TV) until "CLOSED CAPTION" is displayed in magenta.

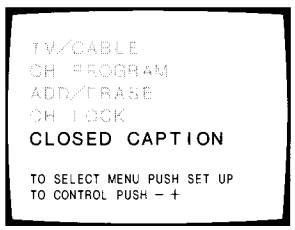

5 Press – or + to call up the closed caption mode display.
Usable selections are displayed in yellow.

Press – or + until "CAPTION 1" or "CAPTION2" is displayed in magenta.
The CAPTION 2 mode may be utilized for alternate languages if they are being transmitted.

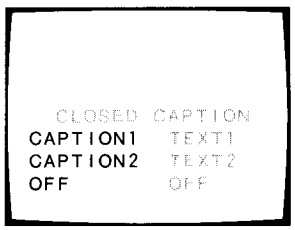

To deactivate this feature
Select "OFF" in the closed caption mode display.

Note:
A closed captioned signal may not be decoded in the following situations.
— When a video tape has been dubbed.
— When the signal reception is weak.
— When the signal reception is non-standard.

TO VIEW TEXT

Text is information that is presented using from one half to full television screen. It is usually not related to the program.
For example, it could be a listing of the closed-captioned programs, news, weather information or stock market reports.

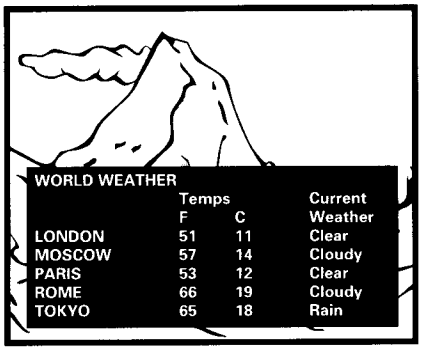

1 Select the desired program.

2 Press **RECALL** to check if the program includes TEXT information.
If it does, the word "TEXT" is displayed on the screen.

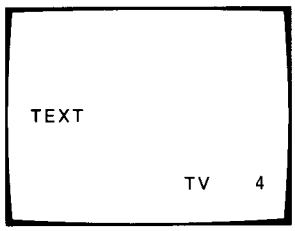

3 Press **SETUP** on the Remote Control (or **MENU** on the TV) to display the Set up menu on the screen.

4 Press **SETUP** repeatedly (or **ADV** on the TV) until "CLOSED CAPTION" is displayed in magenta.

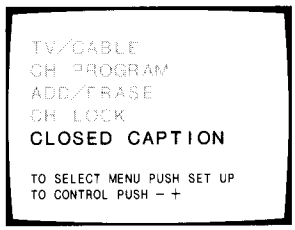

5 Press – or + to call up the closed caption mode display.
Usable selections are displayed in yellow.

Press – or + until "TEXT 1" or "TEXT 2" is displayed in magenta.

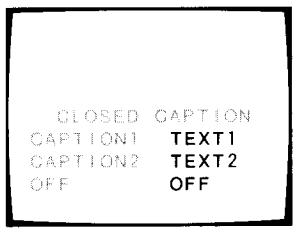

To deactivate this feature
Select "OFF" in the closed caption mode display.

Note:
If you select a Caption format channel and the "TEXT" mode, the TEXT screen will always be displayed.
However, if the TEXT character signal is not transmitted, the characters are not displayed.

ADJUSTING THE PICTURE

You can adjust the picture quality (CONTRAST, BRIGHTNESS, SHARPNESS, COLOR and TINT) to suit your personal preference.

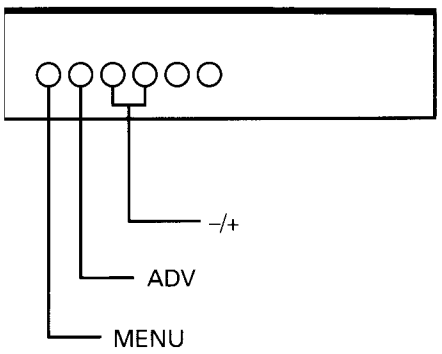

TO ADJUST THE PICTURE QUALITY

1 Press **PIC** on the Remote Control (or **MENU** on the TV) to display the Picture menu.

2 Press **PIC** repeatedly (or **ADV** on the TV) until the item you want to adjust is displayed in magenta.

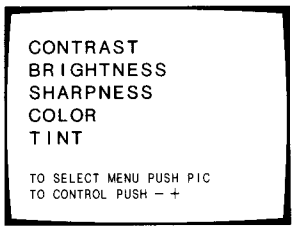

3 Press – or + to adjust the level.

Example: CONTRAST adjustment mode display

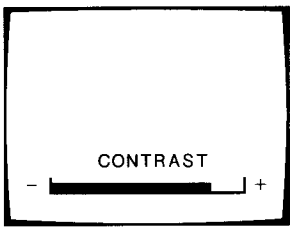

Press **PIC** or **MENU** (while the bar display remains on the screen). The new setting will appear in the Picture menu.

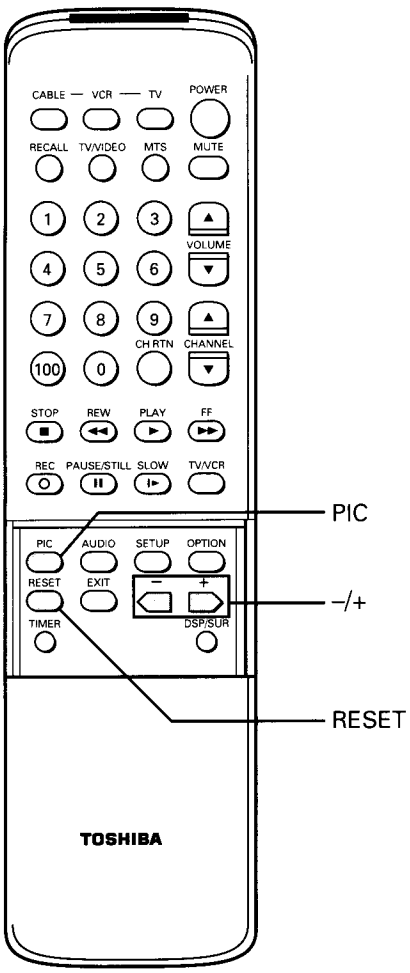

Item	Pressing	
	–	+
CONTRAST	lower	higher
BRIGHTNESS	darker	lighter
SHARPNESS	softer	sharper
COLOR	paler	deeper
TINT	reddish	greenish

To reset the picture adjustments
Press **RESET**. (See the next page.)

ADJUSTING THE SOUND

You can adjust the AUDIO functions (BASS, TREBLE and BALANCE) to suit your personal preference.

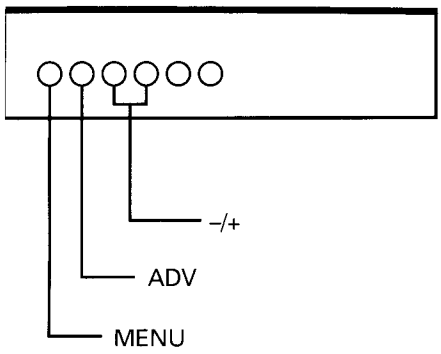

TO ADJUST THE SOUND QUALITY

1 Press **AUDIO** on the Remote Control (or **MENU** on the TV) to display the Audio menu on the screen.

2 Press **AUDIO** (or **ADV** on the TV) until the item you want to adjust is displayed in magenta.

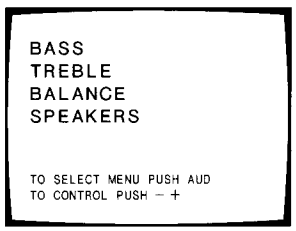

3 Press **–** or **+** to adjust the level.

Example: BASS adjustment mode display

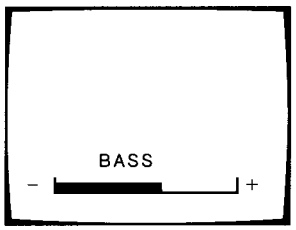

Press **AUDIO** or **MENU** (while the bar display remains on the screen). The new setting will appear in the Audio menu.

Item	Pressing	
	–	+
BASS	weaker	stronger
TREBLE	weaker	stronger
BALANCE	decreases the right channel	decreases the left channel

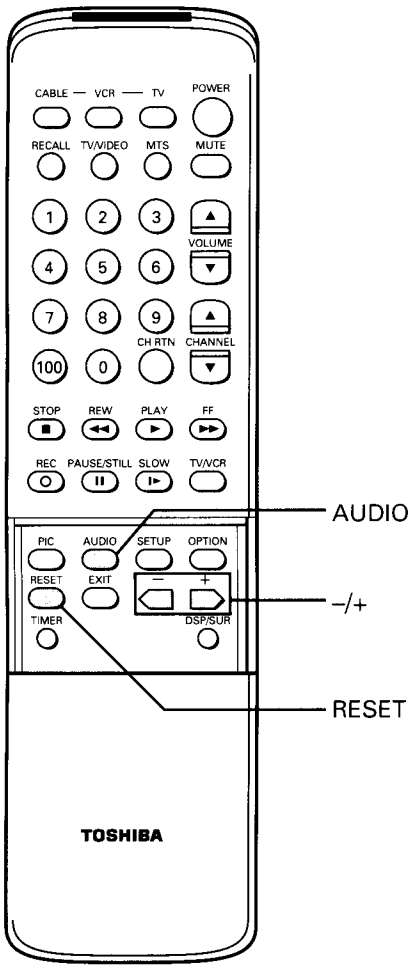

Note:
The "SPEAKERS" function is explained on page 35.

RESET BUTTON

To reset the PICTURE and AUDIO adjustments to the factory-preset level (maximum CONTRAST and all other adjustments centered).

Press **RESET** on the Remote Control.

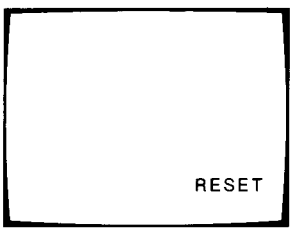

CHANGING ON-SCREEN DISPLAY LANGUAGE

Three different languages (ENGLISH, FRENCH and SPANISH) are available for the on-screen displays (adjustment menus, and messages), and you can choose the desired one.

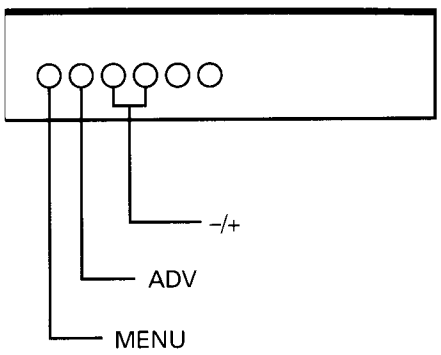

TO SELECT A LANGUAGE

1 Press **OPTION** on the Remote Control (or **MENU** on the TV) to display the Option menu on the screen.

2 Press **OPTION** repeatedly or (or **ADV** on the TV) until "LANGUAGE" is displayed in magenta.

3 Press – or + until your desired language is displayed in magenta.

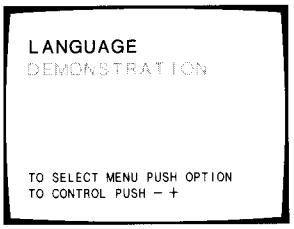

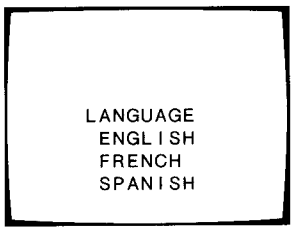

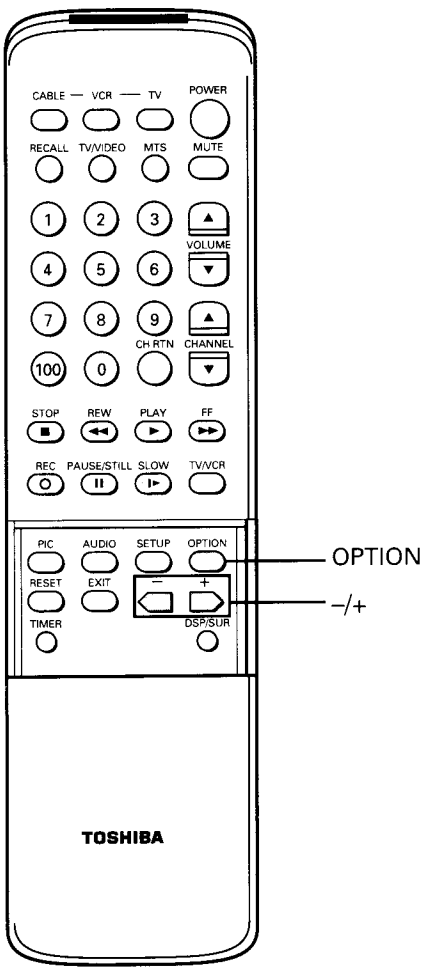

Example: Picture menu display

"ENGLISH"

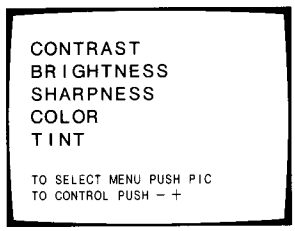

"FRENCH"

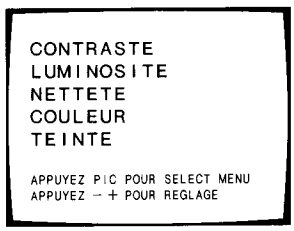

"SPANISH"

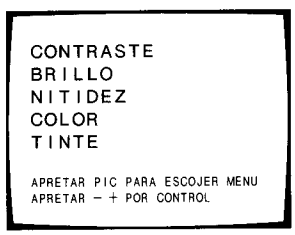

ACTIVATING ON-SCREEN DEMONSTRATION

When this function is activated, your TV will automatically display a variety of its on-screen menus and special features.
This function is provided for demonstration purpose only.
You may not need to use this function.

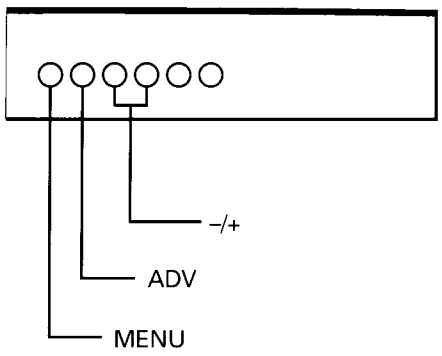

1 Press **OPTION** on the Remote Control (or **MENU** on the TV) to display the Option menu on the screen.

2 Press **OPTION** repeatedly (or **ADV** on the TV) until "DEMONSTRATION" is displayed in magenta.

3 Press – or + until "DEMO START" is displayed on the screen in magenta. The on-screen demonstration will start after about 6 seconds.

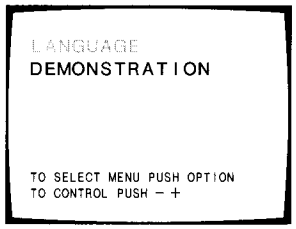

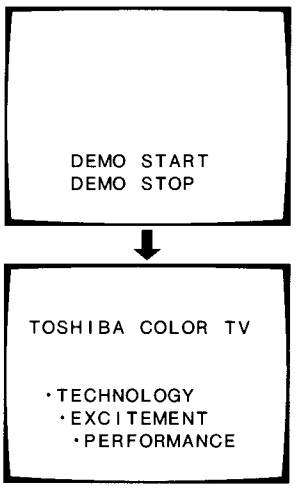

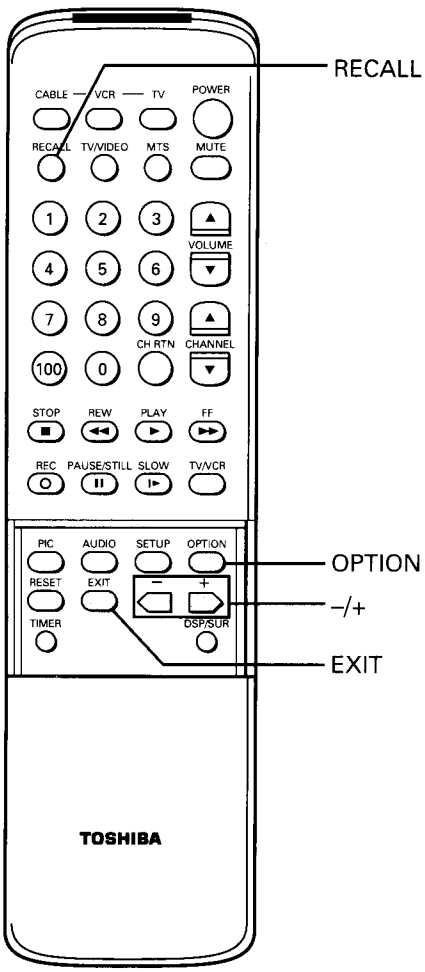

To stop the demonstration
Press **RECALL** or **EXIT**, or select "DEMO STOP" in step 3 above.

MONITOR PANEL

This TV set is equipped with S-VIDEO INPUT connector, VIDEO/AUDIO INPUT jacks and VARIABLE AUDIO OUTPUT jacks for connecting your desired video/audio equipment.

Back of TV

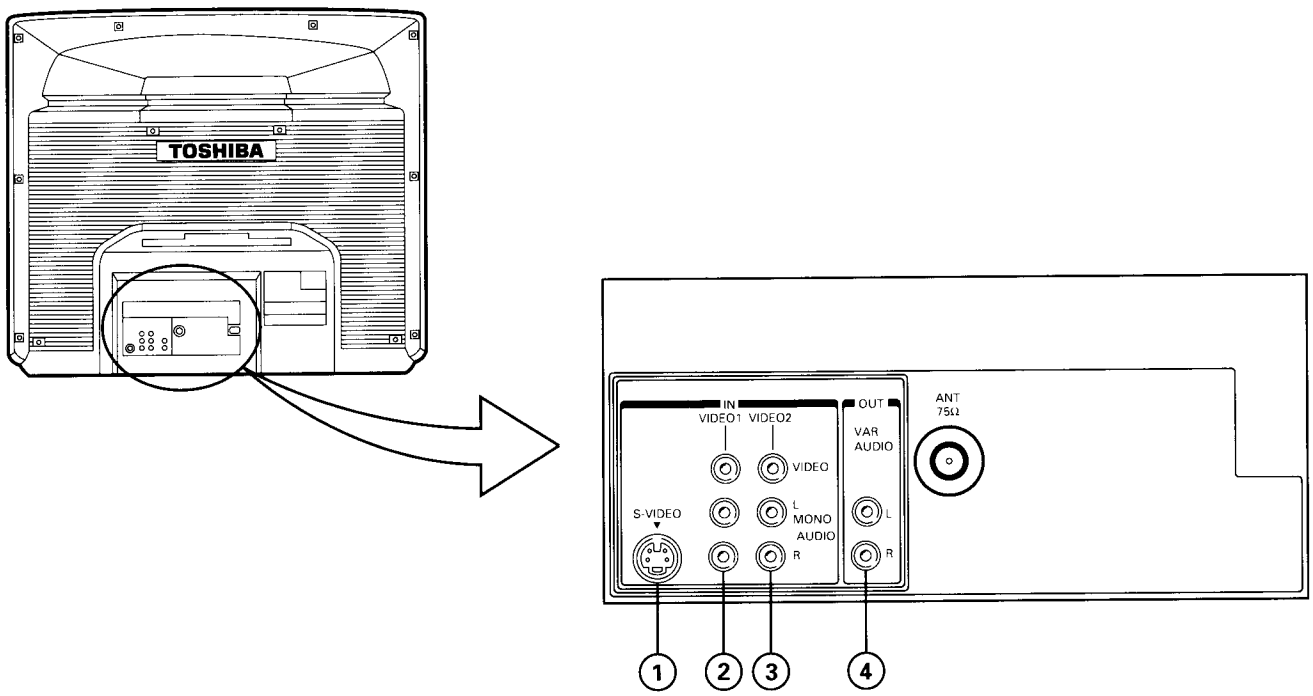

① **S-VIDEO Connector** — provides for direct S-video connection from S-VHS VCR (or camcorder). The TV's VIDEO 1 audio jacks can also be used to connect the VCR's audio cables. Connection details are on page 34.

② **VIDEO1 Jacks** — provide for direct connection of video devices (VCR, camcorder, etc.) with video/audio outputs. Connection details are on page 33.

③ **VIDEO2 Jacks** — provide for direct connection of video devices (VCR, camcorder, etc.) with video/audio outputs. Connection details are on page 36.

④ **VARIABLE AUDIO OUTPUT jacks** — feed volume-controlled stereo audio out from whatever is displayed on the screen, allows connection of audio amplifier and lets you adjust sound level with TV's remote. Connection details are on page 35.

CONNECTING STANDARD VCR

Connect VIDEO1 or VIDEO2 jacks to the video/audio output jacks of a VCR, Video Disc Player, Camcorder, etc. for playback of video material. The material being played back on the video equipment can be viewed on the TV screen.

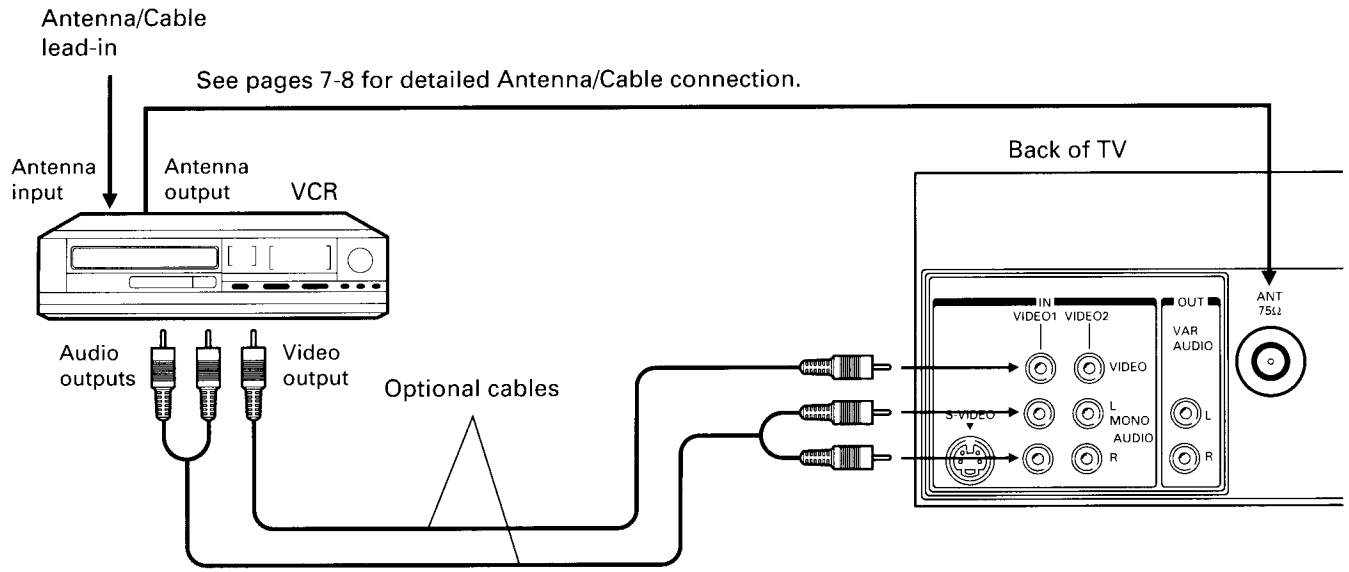

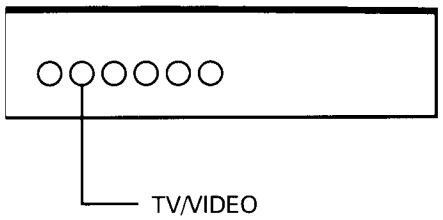

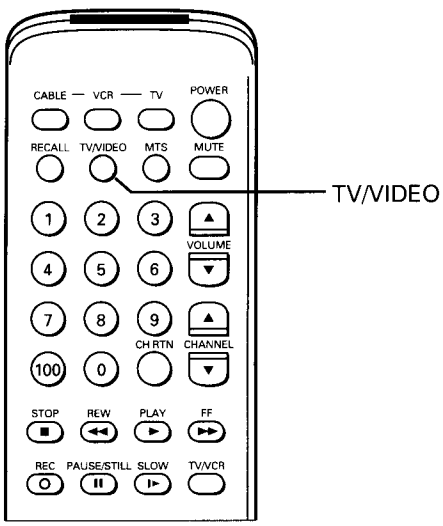

TO SELECT VIDEO INPUT SOURCE

To operate your TV and video equipment properly, refer to the instruction furnished with the video equipment.

1 Turn the TV and VCR ON.

2 Press **TV/VIDEO** on the Remote Control or on the TV to select the appropriate source:
Each time you press the button, TV, VIDEO 1 or VIDEO 2 source will be selected in order.
The selected source will be displayed in magenta.

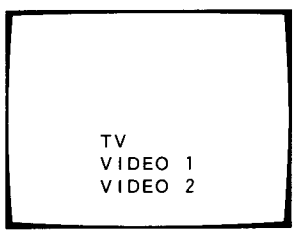

3 Operate your VCR normally.

Notes:

- The VIDEO 2 inputs can also be used for connecting 2nd video equipment with video/audio outputs. To view the video sources from these jacks, select "VIDEO 2" by pressing the TV/VIDEO button.
- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack of VIDEO 1/2 on the TV.

CONNECTING VCR WITH S-VIDEO CONNECTOR

If you connect a VCR with an S-video connector to the "S-VIDEO" connector on the back of the TV, you must also connect the audio cables to the AUDIO jacks of "VIDEO 1" inputs on the back of the TV. The S-video cable only carries the video signal. Audio signals are separate.

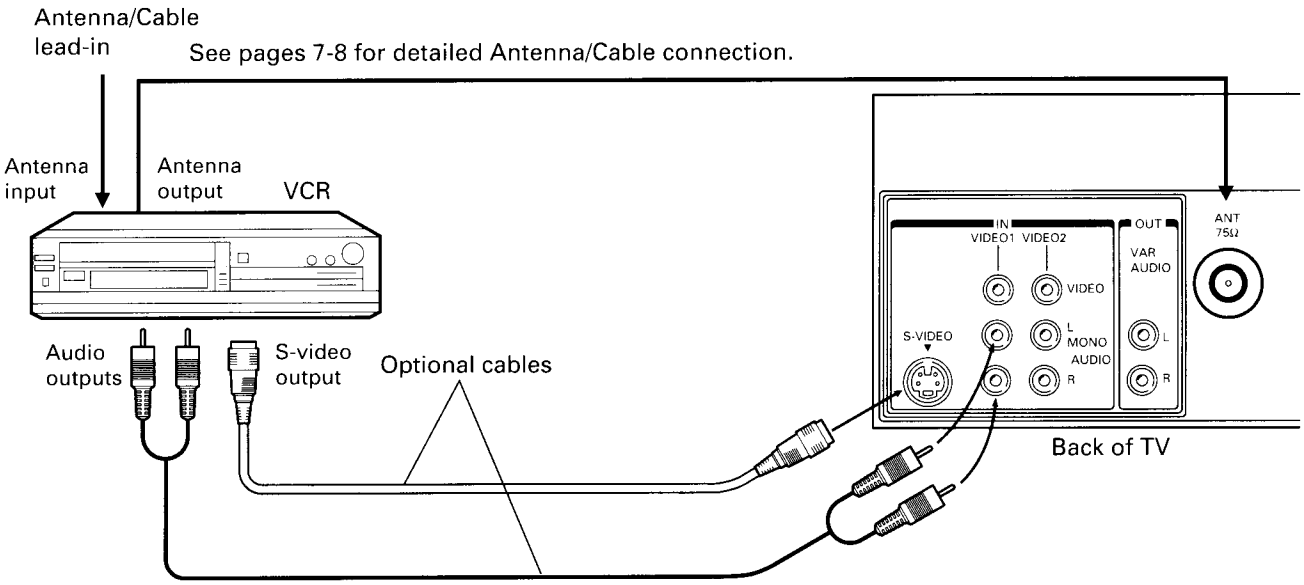

TO SELECT VIDEO INPUT SOURCE

1 Turn the TV and VCR ON.

2 Press **TV/VIDEO** on the Remote Control or on the TV set to select "VIDEO 1" mode.

3 Operate your VCR normally.

Notes:

- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack of VIDEO 1 on the TV set.
- Do not connect video equipment to both the "S-VIDEO" and "VIDEO" of VIDEO 1 terminals at the same time.
- The S-VIDEO terminal accepts SEPARATED Luminance/Chrominance (Y-C) signals conforming to the NTSC standard.

CONNECTING AUDIO AMPLIFIER

Connect the VARiable AUDIO OUT jacks to the external input jacks on the stereo amplifier. You will be able to change and mute volume with the TV's remote control. You will also be able to control bass, treble and balance functions.

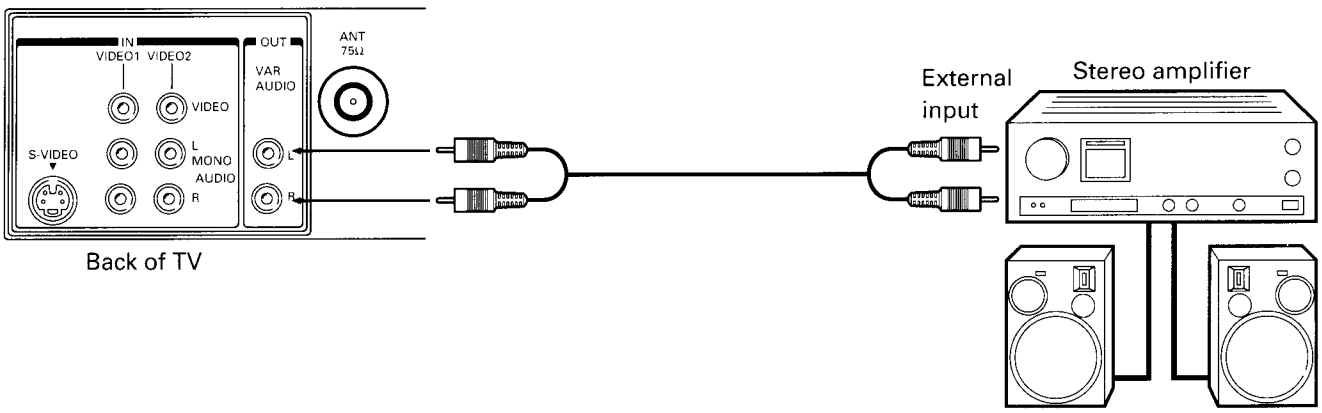

PREPARING TO USE

1 Turn the TV set and stereo amplifier ON.

2 Adjust the VOLUME control on the TV for a moderate listening level.

3 Disconnect the built-in speakers following the instructions at the right.

4 Adjust the volume control on the stereo amplifier for a moderate listening level.

5 Control of the audio can now be done using the audio function buttons (VOLUME, MUTE, BASS, TREBLE and BALANCE) on the TV's remote control.

TO DISCONNECT THE BUILT-IN SPEAKERS

1 Press **AUDIO** on the Remote Control until "SPEAKERS" in the Audio menu is displayed in magenta.

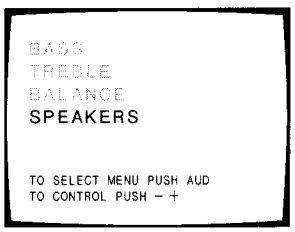

2 Press – or + until "SPEAKERS OFF" is displayed on the screen in magenta.

The built-in speakers will be disconnected.

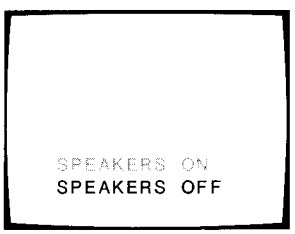

To use the built-in speakers again
Select "SPEAKERS ON" in step 2 above.

CLEANING AND CARE

WARNING: TV sets use High Voltage. Do not try to remove the cabinet back. Refer servicing to qualified service personnel. Never remodel the TV.

- To clean the TV screen:
  1. First remove the plug from the power outlet to avoid possible shock hazard.
  2. Use a clean cellulose sponge or chamois cloth dampened with a solution of mild detergent and warm water to clean TV screen and trim. Do not use too much water on the TV screen. Water spills into the cabinet may cause damage to the TV. Avoid excess water.
  3. Remove any extra moisture with the same cloth or a dry one.

- To maintain the finish and appearance of the cabinet, polish it from time to time with a quality furniture polish.

Note: Never use strong solvents such as thinner, benzene or other chemicals on or near cabinet, as they might damage the finish of the cabinet.

SPECIFICATIONS

TELEVISION SYSTEM:	NTSC standard
CHANNEL COVERAGE:	VHF; 2 through 13 UHF; 14 through 69 Cable TV; mid band (A-8 through A-1, A through I) super band (J through W) hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125)
POWER SOURCE:	120V AC, 60Hz
POWER CONSUMPTION:	105W (average)
AUDIO POWER:	5W + 5W
SPEAKER TYPE:	Two 3-1/4"× 4-3/4" oval
VIDEO/AUDIO TERMINALS:	S-VIDEO INPUT Y-INPUT: 1Vp-p, 75 ohm, negative sync. C-INPUT: 0.286V (p-p) (burst signal), 75 ohm VIDEO 1/VIDEO 2 INPUTS VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV (rms) (30% modulation, 47k ohm) VARIABLE: AUDIO OUTPUT 0-350mV (rms) (30% modulation, 4.7k ohm)
DIMENSIONS:	Width 33-15/64 inches (844mm) Height 27-41/64 inches (702mm) Depth 22-41/64 inches (575mm)
MASS	133.6 lbs (60.5kg)
SUPPLIED ACCESSORIES:	Remote Control with 4 size "AAA" batteries Antenna adapter

Design and specifications are subject to change without notice.

BEFORE CALLING SERVICE PERSONNEL

Before calling service personnel, please check the following chart for a possible cause of the problem you are experiencing. A minor adjustment on your part may eliminate the problem and restore your TV reception.

Symptoms	Check	Adjustments
● No picture, no sound	● Be sure power cord is plugged in. ● May be station trouble. ● Check antenna connections. ● Check antenna for broken wires.	● Press POWER button. ● Try another channel.
● No sound, picture OK	● May be station trouble. ● Check if SPEAKERS ON/OFF function (page 35) is properly set.	● Try another channel. ● Adjust VOLUME.
● Poor sound, picture OK	● May be station trouble. ● Check antenna connections. ● May be local interference from appliance.	● Try another channel. ● Adjust VOLUME. ● Adjust BASS, TREBLE, or BALANCE control. ● Re-orient antenna.
● Poor picture, sound OK Snowy picture Lines in picture Distorted picture Weak picture	● May be local interference from appliance. ● Check antenna connections. ● Check antenna for broken wires. ● May be station trouble.	● Try another channel. ● Adjust BRIGHTNESS. ● Adjust CONTRAST. ● Adjust SHARPNESS. ● Re-orient antenna.
● Poor reception of broadcast channels	● Check antenna connections. ● Check antenna for broken wires. ● If VCR is connected, check TV/VCR switch.	● Try another channel. ● Re-orient antenna.
● No UHF, VHF OK	● Be sure TV/CABLE function (page 19) is in "TV" mode.	
● Unable to select a certain channel with CHANNEL ▲/▼ buttons	● That channel may be locked out with CH LOCK function (page 25).	
● Multiple images (ghosts)	● May be station trouble. ● Check antenna connections.	● Try another channel. ● Re-orient antenna.
● Poor color or No color	● May be station trouble. ● Check antenna connections. ● Check antenna for broken wires. ● May be local interference from appliance. ● Check if station is broadcasting in color. ● If you change the direction of the TV while the TV is activated, the picture may suffer from color shading. If so, turn off the TV and allow for about 30 minutes to cool, then turn on the TV again. The picture should improve.	● Try another channel. ● Re-orient antenna. ● Adjust TINT. ● Adjust COLOR.
● No stereo or SAP sound from a known MTS broadcast	● Check if MTS button is properly set.	
● Remote Control does not work	● Check if CABLE, VCR or TV button is properly set. ● Be sure power cord is plugged in. ● Check battery in Remote Control.	● Change batteries.

LIMITED WARRANTY

Toshiba America Consumer Products,Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty
TACP and THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. "Authorized TACP/THI service station personnel will come to you home when warranty services required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."

Limited Two (2) Year Warranty of Picture Tube
TACP and THI further warrant the picture tube in this product against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. During this period, TACP and THI will replace a defective picture tube without charge to you, except that if a defective picture tube is replaced after one (1) year from the date of the original retail purchase, you pay labor charges involved in the replacement.

Owner's Manual and Registration Card
You should read this owner's manual thoroughly before operating this product. You should also insure that your name and address are on the file as owner of a TACP/THI product by completing and mailing the enclosed registration card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP/THI to provide you with better customer service and improved products. Failure to return the card will not affect your rights under this warranty so long as you retain other proof of purchase such as a bill of sale.

Your Responsibility
The above warranties are subject to the following conditions:
(1) You must retain your bill of sale or provide other proof of purchase.
(2) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
(3) These warranties are effective only if the product is purchased and operated in the U.S.A.
(4) Labor service charges for set installation, set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
(5) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts there of which have had the the serial number removed, altered, defaced or rendered illegible.

Step-By-Step Procedures-How to Obtain Warranty Service

If, after following all of the operating instructions in this manual and checking the section "BEFORE CALLING SERVICE PERSONNEL", you find that service is needed:
(1) Contact one of the TACP/THI Service Centers listed below for warranty service or call the TACP toll free number **800-631-3811** within thirty (30) days after you find a defective product or part to find the nearest TOSHIBA Authorized Service Station or authorized TOSHIBA Dealer.
(2) Please present your bill of sale or other proof to the Authorized Service Station. "Authorized TACP/THI service station personnel will come to you home when warranty services required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."
(3) If you have any question about service, please contact one of the following TACP/THI Service Centers:

IN THE CONTINENTAL UNITED STATES
Should your unit require service, Call

NORTHEAST	MIDWEST	WEST	SOUTHEAST	SOUTHWEST	HAWAII
82 Totowa Road,	1010 Johnson Drive,	5490 E.Francis St.,	6115 Jimmy Carter Blvd.,	1421 Champion Drive,	327 Kamakee Street,
Wayne,	Buffalo Grove,	Ontario,	Suite C2, Norcross,	Suite 304,Carrollton,	Honolulu,
New Jersey 07470	Illinois 60089-6900	California 91761	Georgia 30071-4607	Texas 75006	Hawaii 96814

ALL WARRANTIES IMPLIED BY STATE LAW,INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. **WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY STATE LAW AS HEREBY LIMITED, THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS AND SIMILAR OBLIGATIONS OF MANUFACTURER OR SELLER WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR PARTS.**
NO EVENT SHALL TACP OR THI BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may mot apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

HEAD OFFICE/82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470
FACTORY SERVICE CENTERS/NORTHEAST: 82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470
MIDWEST: 1010 JOHNSON DRIVE, BUFFALO GROVE, ILLINOIS 60089-6900
WEST: 5490 E. FRANCIS ST., ONTARIO, CALIFORNIA 91761
SOUTHWEST: 1421 CHAMPION DRIVE, SUITE 304 CARROLLTON, TEXAS 75006
SOUTHEAST: 6115 JIMMY CARTER BLVD., SUITE C2, NORCROSS, GEORGIA 30071-4607

TOSHIBA HAWAII, INC.

HEAD OFFICE/327 KAMAKEE STREET, HONOLULU, HAWAII 96814,U.S.A. PHONE: (808)521-5377

MANUFACTURED BY

TOSHIBA AMERICA CONSUMER PRODUCTS,INC.

PRINTED IN USA

(94-06)

TOSHIBA

23562076